



To Be Precise.



## CoaxStripper 5400

Programmable Stripping Machine for Coaxial Cable

## OPERATING INSTRUCTIONS

Software Version 2.00 Edition 3 (04 / 01)

---

Schleuniger AG  
Bierigutstrasse 9  
CH-3608 Thun  
Switzerland

Tel. ++41 33 334 03 33  
Fax ++41 33 334 03 34  
[www.schleuniger.com](http://www.schleuniger.com)  
[sales@schleuniger.ch](mailto:sales@schleuniger.ch)

L + H Kabeltechnik GmbH  
Hesselbachstrasse 13  
D-75242 Neuhausen  
Germany  
Phone 0049 7234 95 40-0  
Fax 0049 7234 95 40-95  
zentrale@lhkabeltechnik.de

Schleuniger, Inc.  
87, Colin Drive  
Manchester, NH 03 103  
USA  
Phone (603) 668-8117  
Fax (603) 668-8119  
Sales@schleuniger.com

Schleuniger Japan, Co., Ltd.  
Grand Palace Tamachi 1F  
Shibaura 4-9-18, Minato-ku  
Tokyo 108, Japan  
Phone 0081 3 5442 1191  
Fax 0081 3 5442 1195  
eaa04005@pop09.odn.ne.jp

# TABLE OF CONTENTS

<b>SAFETY REGULATIONS ENGLISH</b> .....	<b>5</b>
<b>SICHERHEITSVORSCHRIFTEN DEUTSCH</b> .....	<b>7</b>
<b>NORME DI SICUREZZA ITALIANO</b> .....	<b>9</b>
<b>PRESCRIPTIONS DE SECURITE FRANÇAIS</b> .....	<b>11</b>
<b>INSTRUCCIONES DE SEGURIDAD ESPAÑOL</b> .....	<b>13</b>
<b>VEILIGHEIDSVORSCHRIFTEN NEDERLANDS</b> .....	<b>15</b>
<b>SIKKERHEDSFORSKRIFTER DANSK</b> .....	<b>17</b>
<b>SÄKERHETSFÖRESKRIFTER SVENSKA</b> .....	<b>19</b>
<b>ABOUT THESE OPERATING INSTRUCTIONS</b> .....	<b>21</b>
Initial Start-up of the CoaxStrip 5400 .....	21
Conductor, Jacket or Layer? .....	21
Fig. 1. Example, Cable with 4 Layers .....	21
<b>CONNECTIONS</b> .....	<b>22</b>
Fig. 2. Rear Panel of CoaxStrip 5400 .....	22
Foot Pedal .....	22
RS 232 Connection .....	22
Fuse Holder / Main Switch .....	23
Mains Connection .....	23
EMC Interference Immunity .....	23
<b>SETUP</b> .....	<b>24</b>
Fig. 3. Setting up the CoaxStrip 5400 .....	24
Fig. 4. Removing the transport packaging material .....	24
Fig. 5. Checking the Mains Voltage .....	25
<b>KEYBOARD</b> .....	<b>26</b>
Fig. 6. Operator Panel with Keyboard .....	26
<b>THE MENUS</b> .....	<b>28</b>
The Main Menu .....	28
Fig. 7. Main Menu .....	28
The Programming Menu .....	29
Fig. 8. Illustration of the Programming Menu .....	29
The Save / Load Menu .....	32
Fig. 9. Illustration of Save / Load Menu .....	32
Fig. 10. Naming and Saving Cables .....	33
The CS Menu (Diagnostics and Settings) .....	35
Fig. 11. Illustration of the Diagnostics and Settings Menu .....	35
f1 User Interface .....	35
f2 Diagnostics .....	36

Fig. 12. The Diagnostics Screen .....	36
f3 Configuration .....	37
Activating the user password .....	37
Deactivating the user password .....	38
f4 and f5 .....	38
The Wire Lists Menu .....	38
The Schleuniger Menu .....	38
Fig. 13. Illustration of the Schleuniger Menu .....	38
<b>PRACTICAL WORK .....</b>	<b>39</b>
The Editing Function .....	39
Fig. 14. Editing Function .....	39
Programming Example .....	40
Fig. 15. Programming Example, Coaxial Cable with 4 Layers .....	40
Fig. 16. Main Menu Display .....	41
Fig. 17. Initiating the Stripping Process .....	42
Diameter more than 7.5 mm .....	43
Fig. 18. Stripping using the guide tube .....	43
Further Processing Parameters .....	43
Processing Both Cable Ends .....	44
Change Processing Sequence .....	44
Fig. 19. Changing the Processing Sequence .....	44
Changing Cable Presentation on Display .....	45
<b>WIRE LISTS .....</b>	<b>46</b>
Load a wire list .....	48
Fig. 20. Screen of „Production Menu Wire List“ .....	48
Fig. 21. Select wire list .....	48
Fig. 22. List first, Cable first .....	49
Creating a new wire list .....	50
Fig. 23. Naming the wire list .....	50
Fig. 24. Loading a cable program into the wire list .....	51
Search function in a wire list .....	52
Deleting wire files in a wire list .....	52
Adding wire files to a wire list .....	52
Modifying wire files in a wire list .....	53
Wire list „Save as“ (copy) .....	53
Save / load a wire list .....	53
<b>SETTINGS .....</b>	<b>54</b>
Adjusting the Mains Voltage .....	54
Fig. 25. Adjusting the Mains Voltage .....	54
Setting the display language and the measurement units .....	55
<b>TECHNICAL DATA .....</b>	<b>56</b>
<b>INDEX .....</b>	<b>57</b>

# SAFETY REGULATIONS ENGLISH

## 1. Symbols



Please follow exactly the work and processes marked with this pictogram. Failure to do so may result in death or severe injury.



Please follow exactly the work and processes marked with this pictogram. Failure to do so may lead to minor injuries and to damage to the machine.



This pictogram provides details of tips and tricks from our development, production and customer service departments.

## 2. Product Description

The Schleuniger CoaxStrip 5400 is an electrically-powered table machine. It can strip coaxial cable in several stages and with a high degree of precision. The maximum cable diameter which can be processed is 11 mm (0.44") and the maximum stripping length is 40 mm (1.58"). All processing parameters, such as cable diameter, cutting position, pull-off length, blade return, blade advance and cut-out time can be programmed via the LCD display and a keyboard.

## 3. Responsibilities

The machine operator is responsible for ensuring that every employee who uses the Schleuniger CoaxStrip 5400 has received training in accordance with these operating instructions (commissioning, operation, maintenance). The training of the operating personnel must include the following:

- Purpose of the machine (see paragraph "2. Product Description").
- Danger areas (see paragraph "5. Danger Areas").
- Safety instructions (see paragraph "6. Safety Requirements").
- Operating the machine in accordance with these operating instructions.

## 4. Personnel Qualifications

To ensure that all instructions are understood, training must take place in the language of the operating personnel. This means that the following personnel qualifications are required:

Assembly, commissioning, instruction	Technical specialist staff who have a good command of English and/or German as well as of the language of the operating personnel.
Operation	Trained staff in accordance with paragraph "3. Responsibilities".
Maintenance, service	Technical specialist staff who have a good command of English or German.

## 5. Danger Areas



- The whole area of the processing space underneath the plexiglass cover:
  - Danger from the rotating stripping head
  - Danger from the clamping function of the centring jaws
- The entire interior area of the machine and the metal casing:
  - Danger from electrical voltages
  - Danger from mechanical moving parts

## 6. Safety Requirements



- The machine is designed for use by people over 14 years of age (EN 294). It is strictly forbidden to allow people aged less than 14 years of age to have access to the machine.
- The machine must only be used in dry, dust-free rooms.
- Never operate the machine unless the protective cover is in place.
- When operating the machine, never wear loose clothing, loose jewellery or long, uncovered hair which could become trapped in the machine
- Always disconnect the machine from the mains power supply and/or the compressed air system before carrying out any maintenance work.
- Never operate the machine unless it is correctly earthed (only applies to electrically-operated machines).
- Only use the machine in accordance with paragraph "2. Product Description". Any other use is only permitted with the written agreement of the manufacturer. The manufacturer will not accept any responsibility for any injuries or damage which result from failure to observe this instruction.
- Do not operate the machine before you have read and understood all the instructions.
- Maintenance work must only be carried out by appropriately trained persons.
- Only use the supplied grease in accordance with these operating instructions.

# SICHERHEITSVORSCHRIFTEN

## DEUTSCH

### 1. Symbole



Bitte befolgen Sie Arbeiten und Abläufe, die mit diesem Piktogramm markiert sind genau. Nichtbefolgen kann zum Tod oder schweren Körperverletzungen führen.



Bitte befolgen Sie Arbeiten und Abläufe, die mit diesem Piktogramm markiert sind genau. Nichtbefolgen kann zu leichten Körperverletzungen und zu Schäden an der Maschine führen.



Diese Piktogramm kennzeichnet Tips und Tricks aus unserer Entwicklungsabteilung, aus der Produktion und von unserem Kundendienst.

### 2. Produktbeschreibung

Die Schleuniger CoaxStrip 5400 ist eine elektrisch angetriebene Tischmaschine. Sie kann Koaxialkabel mit hoher Präzision mehrstufig abisolieren. Der maximal verarbeitbare Kabeldurchmesser liegt bei 11 mm (0.44“) und die maximale Abisolierlänge bei 40 mm (1.58“). Sämtliche Verarbeitungsparameter, wie zum Beispiel Kabeldurchmesser, Einschneidposition, Abzuglänge, Messerrückstellung, Messervoschub und Ausschneidzeit, lassen sich über die LCD-Anzeige und einer Tastatur programmieren.

### 3. Verantwortlichkeiten

Der Betreiber der Maschine trägt die Verantwortung, dass jede Person, die mit dem Schleuniger CoaxStrip 5400 arbeitet, anhand der vorliegenden Betriebsanleitung genau instruiert worden ist (Inbetriebnahme, Bedienung, Instandhaltung). Die Ausbildung des Bedienpersonals muss folgende Punkte enthalten:

- Verwendungszweck der Maschine (Siehe Abschnitt „2. Produktbeschreibung“).
- Gefährdungsbereiche (Siehe Abschnitt „5. Gefährdungsbereiche“).
- Sicherheitsbestimmungen (Siehe Abschnitt „6. Sicherheitsbestimmungen“).
- Bedienung der Maschine entsprechend der vorliegenden Betriebsanleitung.

## 4. Personalqualifikationen

Damit alle Instruktionen verstanden werden, muss die Schulung in der Sprache des Bedienpersonals erfolgen. Somit sind folgende Personalqualifikationen erforderlich.

Montage, Inbetriebnahme, Instruktion	Technische Fachkräfte, welche englisch und/oder deutsch sowie die Sprache des Bedienpersonals beherrschen.
Bedienung	Gemäss Abschnitt „3. Verantwortlichkeiten“ geschulte Mitarbeiter.
Unterhalt, Service	Technische Fachkräfte, welche englisch oder deutsch beherrschen.

## 5. Gefährdungsbereiche



- Gesamter Bereich des Bearbeitungsraumes unter der Plexiglasabdeckung:
  - Gefahr durch den rotierenden Abisolierkopf
  - Gefahr durch die Klemmfunktion der Zentrierbacken
- Gesamter Innenraum der Maschine unter dem Metallgehäuse:
  - Gefahr durch elektrische Spannung
  - Gefahr durch mechanisch bewegte Teile

## 6. Sicherheitsvorschriften



- Die Maschine ist für Personen über 14 Jahre ausgelegt (EN294). Es ist strikte verboten, jüngeren Personen Zutritt zu der Maschine zu gewähren.
- Die Maschine darf nur in trockenen, staubfreien Räumen betrieben werden.
- Betreiben Sie die Maschine nie ohne Schutzabdeckung.
- Tragen Sie beim Arbeiten mit der Maschine keine lose Kleidung, losen Schmuck oder lange offene Haare, welche sich in Teilen der Maschine verfangen können
- Trennen Sie die Maschine vom elektrischen Stromanschluss und/oder von der Druckluft, bevor Sie irgendwelche Unterhaltsarbeiten durchführen.
- Betreiben Sie die Maschine nie ohne angeschlossene Schutz Erde (gilt nur für elektrische Maschinen).
- Benutzen Sie die Maschine nur gemäss Abschnitt „2. Produktbeschreibung“. Andere Verwendungszwecke sind nur mit schriftlicher Zustimmung des Herstellers zulässig. Für Schäden, welche aus dem Missachten dieser Vorschrift entstehen, lehnt der Hersteller jede Haftung ab.
- Betreiben Sie die Maschine nicht, bevor Sie alle Anweisungen gelesen und verstanden haben.
- Instandhaltungsarbeiten dürfen nur entsprechend ausgebildete Personen durchführen.
- Benutzen Sie mitgelieferte Schmiermittel ausschliesslich entsprechend der vorliegenden Betriebsanleitung.

# NORME DI SICUREZZA ITALIANO

## 1. Symboli



Si prega di attenersi con precisione alle istruzioni e cicli di lavorazione marcati con questo pittogramma. La mancata osservanza può comportare il pericolo di riscontrare gravissime lesioni al corpo o perfino della morte.



Si prega di attenersi con precisione alle istruzioni e cicli di lavorazione marcati con questo pittogramma. La mancata osservanza può comportare il pericolo di riscontrare lievi lesioni al corpo o di danneggiare la macchina.



Questo pittogramma contrassegna espedienti e trucchi dal nostro reparto di sviluppo, dalla produzione e dal nostro servizio di assistenza.

## 2. Descrizione del prodotto

La Schleuniger CoaxStrip 5400 è una macchina da tavolo azionata elettricamente. Essa può isolare cavi coassiali con più strati e con elevata precisione. Il massimo diametro di lavorazione dei cavi corrisponde a 11 mm (0.44") e la massima lunghezza d'isolamento a 40 mm (1.58"). I vari parametri di lavorazione, come ad esempio, diametro dei cavi, posizione di taglio, lunghezza d'estrazione, rimessa lame, avanzamento lame e tempo di ritaglio, possono essere programmati tramite una tastiera e visualizzatore LCD.

## 3. Responsabilità

L' esercente della macchina è responsabile per la precisa istruzione di ogni persona da adibire ai lavori con la macchina Schleuniger CoaxStrip 5400, secondo le presenti istruzioni per l'uso (messa in servizio, manovra, manutenzione preventiva). L'addestramento professionale del personale addetto ai lavori deve comprendere i punti seguenti:

- Scopo previsto per la macchina (vedi paragrafo "2. Descrizione del prodotto").
- Settori di pericolo (vedi paragrafo "5. Settori di pericolo").
- Disposizioni di sicurezza (vedi paragrafo "6. Disposizioni di sicurezza").
- Manovra della macchina in corrispondenza alle presenti istruzioni per l'uso.

## 4. Qualificazione del personale

Al fine di garantire, che tutte le istruzioni vengano ben capite, è necessario che l'addestramento avvenga nella rispettiva lingua madre del personale da adibire ai lavori. Sono necessarie le seguenti qualificazioni del personale.

Montaggio, messa in servizio ed istruzione	gli operai tecnici specializzati che conoscono la lingua inglese e/oppure tedesca nonché la lingua del personale addetto ai lavori.
Manovra	collaboratori addestrati ed istruiti secondo il paragrafo "3. Responsabilità".
Manutenzione e servizi	operai tecnici specializzati che conoscono la lingua inglese e/oppure tedesca.

## 5. Campi di pericolosità



- Zona di lavorazione complessiva coperta dal pannello di plexiglas:
  - pericolo derivato dalla testina rotante d'isolamento
  - pericolo derivato dalla funzione di bloccaggio delle ganasce di centraggio
- Zona interna complessiva della macchina sotto il contenitore di metallo:
  - pericolo derivato da tensione elettrica
  - pericolo derivato componenti meccanici mobili

## 6. Disposizioni di sicurezza



- I lavori alla macchina possono essere affidati solamente a persone che hanno già compiuto il 14° anno d'età (EN294). È severamente vietato l'accesso alla macchina da parte di persone d'età minore.
- La macchina deve essere utilizzata solamente in ambienti asciutti, privi di polvere e ben puliti.
- Non utilizzare mai la macchina senza il coperchio di protezione.
- Durante i lavori con la macchina non è consentito portare indumenti troppo larghi, gioielli sciolti oppure capelli lunghi sciolti, che possano incastrarsi nei componenti mobili della macchina.
- Sconnettere la macchina dalla rete elettrica e/oppure dall'aria compressa, prima di eseguire qualsiasi lavoro di manutenzione.
- Non utilizzare mai la macchina senza il necessario collegamento alla terra (valevole solamente per le macchine elettriche).
- Utilizzare la macchina solamente in conformità al capoverso "2. Descrizione del prodotto". Altri scopi d'applicazione sono consentiti solamente con l'autorizzazione scritta del costruttore. Per i danni che risulteranno in seguito alla mancata osservanza di queste prescrizioni, il costruttore non si assumerà alcuna responsabilità.
- Non mettere in funzione la macchina, prima di aver letto attentamente e capito bene tutte le istruzioni per l'uso.
- I lavori di manutenzione preventiva devono essere eseguiti esclusivamente da parte di persone rispettivamente addestrate e qualificate.
- Utilizzare i lubrificanti forniti esclusivamente secondo le presenti istruzioni per l'uso.

# PRESCRIPTIONS DE SECURITE FRANÇAIS

## 1. Symboles



Veillez observer scrupuleusement les opérations et les procédures repérées par ce pictogramme. Toute non-observation peut entraîner la mort ou provoquer de graves blessures.



Veillez observer scrupuleusement les opérations et les procédures repérées par ce pictogramme. Toute non-observation peut provoquer des blessures légères et endommager la machine.



Ce pictogramme identifie les conseils et les astuces émanant de notre bureau d'études, de la production et du service après-vente.

## 2. Description des produits

La CoaxStrip (machine à dénuder les câbles coaxiaux) 5400 de Schleuniger est une machine de table à moteur électrique. Elle peut dénuder avec précision une vaste gamme de câbles coaxiaux. Le diamètre maximum de câble à dénuder est de 11 mm (0.44") et la longueur maximale à dénuder est de 40 mm (1.58"). Tous les paramètres de travail, comme par exemple, le diamètre du câble, la position de l'incision, la longueur de tirage, le rappel des couteaux, l'avance des couteaux et la durée de découpe sont programmables par l'intermédiaire d'un affichage à cristaux liquides et d'un clavier.

## 3. Responsabilités

L'opérateur de la machine endosse la responsabilité de la formation spécifique de toute personne travaillant avec la CoaxStrip 5400 de Schleuniger à partir des instructions de service ci-jointes (mise en service, commande, maintenance). La formation du personnel exploitant doit comprendre les points suivants :

- Application de la machine (voir chapitre "2. Description des produits").
- Zones de dangers (voir chapitre "5. Zones de danger").
- Dispositions de sécurité (voir chapitre "6. Dispositions de sécurité").
- Exploitation de la machine conformément aux instructions de service en vigueur.

## 4. Qualifications du personnel

Afin que toutes les instructions soient comprises, la formation doit se faire dans la langue du personnel opérateur. Qualifications du personnel nécessaires :

Montage, mise en service, instruction	Personnel spécialisé maîtrisant l'anglais et/ou la langue du personnel opérateur.
Commande	Selon le chapitre "3. Responsabilités" employés formés.
Entretien, maintenance	Personnel technique maîtrisant l'anglais ou l'allemand.

## 5. Zones de dangers



- Zone complète de l'espace de travail située sous le couvercle en plexiglas :
  - danger dû à la tête pivotante de dénudage
  - danger dû à l'action de blocage des mâchoires de centrage
- Toute la zone intérieure de la machine sous le carter métallique :
  - danger dû à la tension électrique
  - danger dû aux pièces mécaniques mobiles

## 6. Dispositions de sécurité



- La machine est conçue pour des personnes de plus de 14 ans (EN294). Il est strictement interdit de laisser l'accès à la machine à des personnes plus jeunes.
- N'utiliser la machine que dans des locaux secs et exempts de poussière.
- Ne jamais utiliser la machine sans capot de protection.
- Quand vous travaillez avec la machine, ne jamais porter de vêtements amples, de pendentifs ou de cheveux longs non attachés susceptibles d'être happés par les pièces de la machine
- Débrancher la machine du secteur et/ou de l'air comprimé avant de procéder à la moindre opération de maintenance.
- Ne jamais utiliser la machine sans mise à la terre (uniquement valable pour les machines électriques).
- N'utiliser la machine que selon le chapitre "2. Description des produits". Toute autre application est uniquement possible avec une autorisation écrite du constructeur. En cas de dommages provoqués par un non-respect de ces prescriptions, le constructeur se dégage de toute responsabilité.
- Ne pas se servir de la machine avant d'avoir lu et compris toutes les directives.
- Seul le personnel formé compétent est habilité à procéder aux opérations de maintenance.
- Ne pas utiliser d'autres lubrifiants que ceux fournis conformément à ces instructions de service.

# INSTRUCCIONES DE SEGURIDAD ESPAÑOL

## 1. Symbolos



Por favor, ejecute exactamente los trabajos y procedimientos que están marcados con este pictograma. La inobservancia puede conducir a la muerte o a lesiones físicas de gravedad.



Por favor realice exactamente los trabajos y procedimientos que están marcados con este pictograma. La inobservancia puede conducir a ligeras lesiones físicas y daños en la máquina.



Este pictograma identifica trucos y sugerencias de nuestros departamentos de desarrollo, producción y servicio de posventa.

## 2. Descripción del producto

La CoaxStrip 5400 de Schleuniger es una máquina de mesa con accionamiento eléctrico. Puede desaislar en varias etapas cables coaxiales con elevada precisión. El diámetro máximo de cable que puede ser procesado se encuentra en 11 mm (0,44") y la longitud de desaislación máxima en 40 mm (1.58"). Todos los parámetros de procesamiento, como por ejemplo el diámetro del cable, posición de incisión, longitud a desprender, retracción de cuchilla, avance de cuchilla y tiempo de recorte, permiten ser programados a través de un indicador LCD y un teclado.

## 3. Responsabilidades

El usuario gestor de la máquina asume la responsabilidad de que cada persona que trabaje con la CoaxStrip 54000 de Schleuniger, haya sido exactamente instruido de acuerdo a las instrucciones de servicio presentadas (puesta en marcha, operación, conservación). La instrucción de este personal de operaciones debe contener los siguientes puntos.

- Finalidad de uso de la máquina (véase apartado "2. Descripción del producto").
- Zonas de peligro (véase apartado "5. Zonas de peligro").
- Normas de seguridad (véase apartado "6. Normas de seguridad").
- Operación de la máquina de acuerdo a las instrucciones de las presentes instrucciones de servicio.

## 4. Cualificación del personal

Para que se comprendan todas las instrucciones, se debe realizar el entrenamiento en el idioma del personal de operaciones. De esta manera se requieren las siguientes cualificaciones del personal.

Montaje, puesta en marcha, instrucción	Personal profesional técnico, el cual domine el inglés y/o alemán así como el idioma del personal de operaciones
Operación	Personal entrenado de acuerdo al apartado "3. Responsabilidades".
Mantenimiento, asistencia técnica	Personal profesional técnico, el cual domine el inglés o el alemán

## 5. Zonas de peligro



- La zona del espacio de trabajo completa debajo de la cubierta de Plexiglas:
  - Peligro por el cabezal de desaislación rotativo
  - Peligro por las funciones de sujeción de las mordazas de centrado
- El espacio interior completo de la máquina debajo de la carcasa de metal:
  - Peligro por tensión eléctrica
  - Peligro por componentes mecánicos en movimiento

## 6. Normas de seguridad



- La máquina está dimensionada para personas con más de 14 años de edad (EN294). Está estrictamente prohibido autorizar a personas más jóvenes a acceder a la máquina.
- La máquina solamente puede ser utilizada en recintos secos y libres de polvo.
- No opere nunca la máquina sin la cubierta de protección.
- Al trabajar con la máquina no lleve ropa holgada, joyas o cabellos largos sueltos los cuales puedan ser atrapados en componentes de la máquina.
- Antes de realizar cualquier trabajo de mantenimiento desconecte la máquina del suministro eléctrico y/o de aire comprimido.
- No utilice nunca la máquina sin la puesta a tierra conectada (vale solamente para máquinas eléctricas).
- Utilice la máquina solo de acuerdo al apartado "2. Descripción del producto".
- Otras finalidades de uso solamente son admisibles con un consentimiento por escrito del fabricante. El fabricante rechaza cualquier responsabilidad por daños consecuentes de la inobservancia de esta norma.
- No opere la máquina antes de haber leído y comprendido todas las instrucciones.
- Los trabajos de mantenimiento solamente pueden ser ejecutados por personas debidamente entrenadas.
- Utilice el lubricante que se suministra, exclusivamente de acuerdo a las presentes instrucciones de servicio.

# VEILIGHEIDSVOORSCHRIFTEN NEDERLANDS

## 1. Symbolen



Houdt u zich bij de met dit pictogram gekenmerkte werkzaamheden en processen zorgvuldig aan de aanwijzingen. Doet u dat niet, kan dit de dood of zware lichamelijke letsels tot gevolg hebben.



Houdt u zich bij de met dit pictogram gekenmerkte werkzaamheden en processen zorgvuldig aan de aanwijzingen. Doet u dat niet, kan dit lichtere lichamelijke letsels of een beschadiging van de machine tot gevolg hebben.



Dit pictogram kenmerkt tips en trucs uit onze ontwikkelingsafdeling, uit de productie en van onze klantenservice.

## 2. Productbeschrijving

De Schleuniger CoaxStrip 5400 is een elektrisch aangedreven tafelmachine. Hij kan de isolatie van een coaxkabel zeer precies en tot op verschillende niveaus verwijderen. De maximaal mogelijke kabeldiameter is ong. 11 mm (0.44") en de maximale lengte van het weg te nemen kabelgedeelte ong. 40 mm (1.58"). Alle verwerkingsparameters zoals bijvoorbeeld kabeldiameter, uitsnijpositie, aftreklengte, terugzetten en voorschuiwen van het mes en uitsnijtijd kunnen via het LCD-display en een toetsenbord worden geprogrammeerd.

## 3. Verantwoordelijkheid

De beheerder van de machine is daarvoor verantwoordelijk dat iedereen die met de Schleuniger CoaxStrip 5400 werkt, zorgvuldig wordt geïnstrueerd op basis van deze gebruiksinstructies (inbedrijfstelling, bediening, instandhouding). Bij de opleiding van het bedieningspersoneel is op volgende punten te letten:

- Toegelaten toepassingen van de machine (zie paragraaf "2. Productbeschrijving").
- Gevarenzones (zie paragraaf "5. Gevarenzones").
- Veiligheidsvoorschriften (zie paragraaf "6. Veiligheidsvoorschriften").
- Bediening van de machine volgens deze gebruiksinstructies.

## 4. Kwalificaties van het personeel

Om zeker te zijn dat alle instructies worden begrepen, moet de opleiding in de taal van het bedieningspersoneel gebeuren. Daarom is de volgende kwalificatie van het personeel vereist:

Montage, inbedrijfstelling, instructie	Technische vakkrachten de Engelse en/of de Duitse taal en bovendien de taal van het bedieningspersoneel beheersen.
Bediening	Volgens paragraaf "3. Verantwoordelijkheid" geschoolde medewerkers.
Onderhoud, service	Technische vakkrachten de Engelse of de Duitse taal beheersen.

## 5. Gevarenzones



- De gehele bewerkingszone onder de plexiglasafdekking:
  - Gevaar door de roterende wegisoleerkop
  - Gevaar bij het inklemmen door de centreeklauwen
- Alle onderdelen binnen de machine onder het metalen huis:
  - Gevaar door elektrische spanning
  - Gevaar door mechanisch bewogen onderdelen

## 6. Veiligheidsvoorschriften



- De machine is ontwikkeld voor personen boven de 14 jaar (EN294). Het is streng verboden jongere personen in de buurt van de machine te laten komen.
- Met de machine mag alleen in droge, stofvrije ruimtes worden gewerkt.
- Werk nooit met de machine zonder de veiligheidsafdekking.
- Draag bij het werken met de machine geen losse kleding of sieraden of lang, open haar, die in onderdelen van de machine zou kunnen blijven hangen.
- Onderbreek de stroom- en/of persluchtverzorging vooraleer u onderhoudswerkzaamheden uitvoert.
- Werk nooit met de machine wanneer deze niet geaard is (geldt alleen voor elektrische machines).
- Gebruik de machine slechts volgens paragraaf "2. Productbeschrijving". Elk ander gebruik is alleen met schriftelijke toestemming van de fabrikant toegestaan. Voor schade die daardoor ontstaat, dat deze instructie niet wordt opgevolgd, is de fabrikant niet aansprakelijk.
- Niet met de machine werken vooraleer alle aanwijzingen gelezen en begrepen te hebben.
- Instandhoudingswerkzaamheden alleen door vakkundig personeel.
- Gebruik de meegeleverde smeermiddelen alleen in overeenstemming met deze bedrijfsinstructies.

# SIKKERHEDSFORSKRIFTER DANSK

## 1. Symboler



Følg venligst arbejder og forløb, som er make-ret i dette piktogram helt nøjagtigt. Følges dette ikke, kan det føre til død, eller svær legemsbeskadigelse.



Følg venligst arbejder og forløb, som er make-ret i dette piktogram helt nøjagtigt. Følges dette ikke, kan det føre til lette legemesbeskadigelser, og skader på maskinen.



Dette piktogram indeholder tips og tricks fra vores udviklingsafdeling, fra produktionen og fra vores kundeservice.

## 2. Produktbeskrivelse

Schleuniger CoaxStrip 5400 er en elektrisk drevet bord-maskine. Den kan med høj præcision i forskellige trin afisolere Koaxialkabel. Den maximale kabeldiameter som kan bearbejdes ligger ved 11 mm (0,44") og den maximale afisoleringslængde ved 40 mm (1,58").

Alle bearbejdningsparametre, som f.eks. kabeldiameter, endeskæreposition, aftrækningslængde, knivtilbagestilling, knivfremskubning, og udskæringstid, kan programmeres over tastaturet og LCD displayet.

## 3. Ansvar

Ejeren af maskinen har ansvaret for, at enhver person som arbejder med Schleuniger CoxaStripper 5400, er blevet nøjagtigt instrueret iflg. betjeningsvejledningen, ( idrifttagning, betjening, vedligeholdese ). Uddannelsen af betjeningspersonalet skal indeholde følgende punkter:

- Maskinens anvendelsesformål(Se afsnit " 2. Produktbeskrivelse ").
- Fareområder ( Se afsnit " 5. Fareområder ").
- Sikkerhedsbestemmelser ( Se afsnit " 6 sikkerhedsbestemmelser ").
- Betjening af maskinen iflg. foreliggende betjeningsvejledning.

## 4. Personalets kvalifikationer

For at sikre at alle instruktioner bliver forstået, skal uddannelsen foregå i betjeningspersonalets sprog. Dermed er følgende personalekvalifikationer nødvendige.

Montage, idrifttagning, instruktion	Tekniske fagfolk, som behersker engelsk og/eller betjeningspersonalets sprog.
Betjening	Iflg. afsnit "3. Ansvar" skolede medarbejdere.
Vedligeholdelse, service	Tekniske fagfolk, som behersker engelsk eller tysk.

## 5. Farlige områder



- Hele bearbejdningsområdet under plexiglasafdækningen:
  - Fare ved det roterende afisoleringshoved
  - Fare for indklemning i centreringsbakkerne
- Hele maskinens indvendige rum under maskinhuset:
  - Fare ved elektrisk spænding
  - Fare ved mekanisk bevægelige dele

## 6. Sikkerhedsbestemmelser



- Maskinen er konstrueret til personer over 14 år (EN294). Det er absolut forbudt at give personer under 14 år tilgang til maskinen.
- Maskinen må kun drives i tørrer, og støvfrie rum.
- Maskinen må aldrig drives uden beskyttelsesafdækning.
- Bær ved arbejde med maskinen ikke løstsiddende tøj, løse smykker, eller langt åbent hår, som evt. kan fanges af maskinen.
- Afbryd maskinen fra strømtilslutningen og/eller tryklufften, før De foretager vedligeholdelsesarbejder af enhver art.
- Driv aldrig maskinen uden at den er jordret (gælder kun for elektriske maskiner).
- Benyt kun maskinen iflg. afsnit "2. Produktbeskrivelse").
- Andre anvendelsesformål er kun tilladt med skriftlig tilladelse fra fabrikanten. For skader som opstår ved misligholdelse af disse forskrifter, overtager fabrikanten intet ansvar.
- Driv ikke maskinen før De har læst og forstået alle anvisninger.
- Vedligeholdelsesarbejder må kun udføres af respektivt uddannede personer.
- Benyt det med leverede smøremiddel udelukkende iflg. foreliggende betjeningsvejledning.

# SÄKERHETSFÖRESKRIFTER SVENSKA

## 1. Symboler



Utför arbeten och förlopp som är markerade med det här piktogrammet exakt enligt anvisningarna. Beaktas de inte kan livshotande skador bli följden.



Utför arbeten och förlopp som är markerade med det här piktogrammet exakt enligt anvisningarna. Beaktas de inte kan lätta kroppsskador och skador på maskinen bli följden.



Det här piktogrammet markerar tips och tricks från vår utvecklingsavdelning, från produktionen och från vår kundtjänst.

## 2. Produktbeskrivning

Acceleratorn CoaxStrip 5400 är en eldriven bordsmaskin. Den kan avisolera koaxialkablar med hög precision i flera steg. Den maximala kabeldiametern som kan bearbetas ligger på 11 mm (0.44") och den maximala avisoleringslängden på 40 mm (1.58"). Samtliga bearbetningsparametrar, som t.ex. kabeldiameter, inskärningsposition, avdragningslängd, knivretur, knivframmatning och utskärningstid, kan programmeras via LCD-skärmen och ett tangentbord.

## 3. Ansvarighetsomraden

Ägaren av maskinen ansvarar för att varje person som arbetar med acceleratorn CoaxStrip 5400, instruerats exakt med ledning av föreliggande manual (idrifttagning, manövrering, underhåll). Utbildningen av manöverpersonalen måste omfatta följande punkter:

- Maskinens användningsändamål (se avsnitt "2. Produktbeskrivning").
- Riskområden (se avsnitt "5. Riskområden").
- Säkerhetsbestämmelser (se avsnitt "6. Säkerhetsbestämmelser").
- Manövrering av maskinen i enlighet med föreliggande manual.

## 4. Personalens kvalifikationer

För att alla instruktioner ska förstås, måste skolningen göras på manöverpersonalens spårk. Personalen måste således ha följande kvalifikationer.

Montering, idrifttagning, instruktion	Teknisk fackpersonal, som kan engelska och/eller tyska samt manöverpersonalens språk.
Manövrering	Anställda som utbildats enligt avsnitt "3. Ansvarighetsområden".
Underhåll, service	Teknisk fackpersonal, som kan engelska eller tyska.

## 5. Riskomraden



- Hela bearbetningsrummets utrymme under plexiglaspanelen:
  - fara genom det roterande avisoleringshuvudet
  - fara genom centreringsbackarnas klämfunktion
- Hela maskinens inre utrymme under metallkåpan:
  - fara genom elektrisk spänning
  - fara genom mekaniskt flyttade delar

## 6. Säkerhetsföreskrifter



- Maskinen är konstruerad för personer över 14 år (EN294). Det är strängt förbjudet att ge yngre personer tillträde till maskinen.
- Maskinen får endast användas i torra, dammfria lokaler.
- Använd aldrig maskinen utan skyddspanel.
- Bär inga löst åtsittande kläder, lösa smycken eller långt hängande hår när ni arbetar med maskinen. De kan fastna i maskinen.
- Skilj maskinen från den elektriska strömanslutningen och/eller från tryckluften, innan ni genomför några som helst underhållsarbeten.
- Använd aldrig maskinen utan ansluten skyddsjord (gäller bara för elektriska maskiner).
- Använd maskinen endast enligt avsnitt "2. Produktbeskrivning". Andra användningsändamål är endast tillåtna om tillverkaren godkänt detta skriftligt. Tillverkaren ansvarar inte för skador som uppstår p.g.a. att denna föreskrift inte beaktas.
- Använd inte maskinen förrän ni läst och förstått alla anvisningar.
- Underhållsarbeten får endast utföras av personer med motsvarande utbildning.
- Använd medföljande smörjmedel uteslutande i enlighet med föreliggande manual.

# ABOUT THESE OPERATING INSTRUCTIONS


## Initial Start-up of the CoaxStrip 5400

If you are using the CoaxStrip 5400 for the first time, make absolutely sure that the machine is connected up properly. See „SETUP“, page 24.



### Conductor, Jacket or Layer?

The most frequently used coaxial cables are made up of 4 "layers": conductor; dielectric, shield and jacket. In order to keep the text in these operating instructions understandable, we only talk about "layers". The 1st layer denotes the conductor, the last one denotes the jacket.

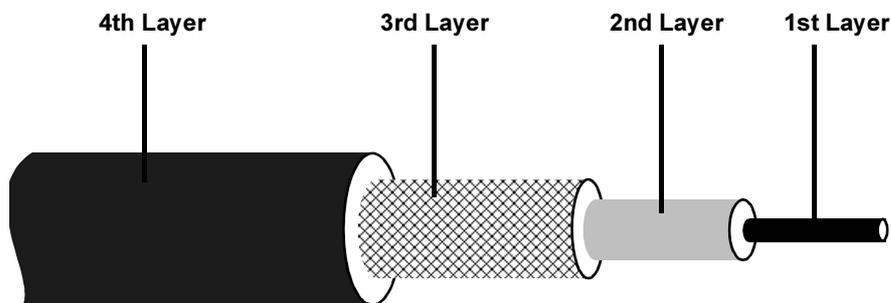

**Fig. 1. Example, Cable with 4 Layers**

# CONNECTIONS



HOW TO REPLACE THE MAINS FUSES IS EXPLAINED IN THE „MAINTENANCE INSTRUCTIONS“.

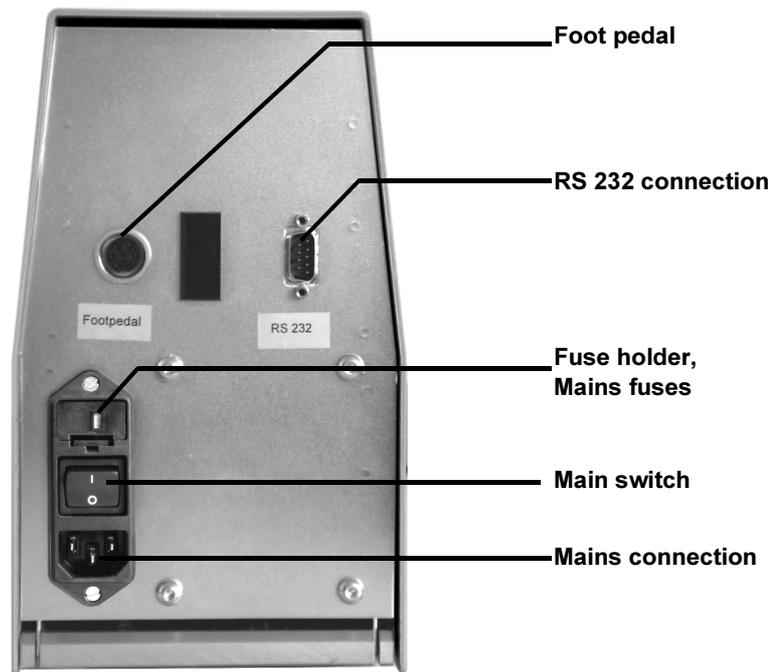


Fig. 2. Rear Panel of CoaxStrip 5400

## Foot Pedal

A foot pedal can be attached to this connection. The stripping process can then only be started by means of the foot pedal. The sensor button at the blades is switched off.

## RS 232 Connection

A PC can be connected via this interface. This enables cable programs to be loaded to and called up from an external memory. This connection is also used for a software upgrade.

---

## Fuse Holder / Main Switch

The fuse holder contains the two mains fuses. The mains voltage set is visible in the small window. The CoaxStrip 5400 can be switched on and off with the main switch.

## Mains Connection

- single phase with protective ground (2P+E)
- 100/115 VAC: 2.0 A/T
- 230/240 VAC: 1.0 A/T
- 50-60 Hz, 150 VA


## EMC Interference Immunity

In order that the CoaxStrip 5400 fulfills the EMC regulations and to reduce interference influences, only the original Schleuniger cables must be connected. In addition, all plugs must be mounted in accordance with regulations.




# SETUP

- After unpacking, place the machine on a level working surface (benchtop, workbench, etc.). The front plate must be flush with the edge of the benchtop. The slugs can then fall freely into a container.

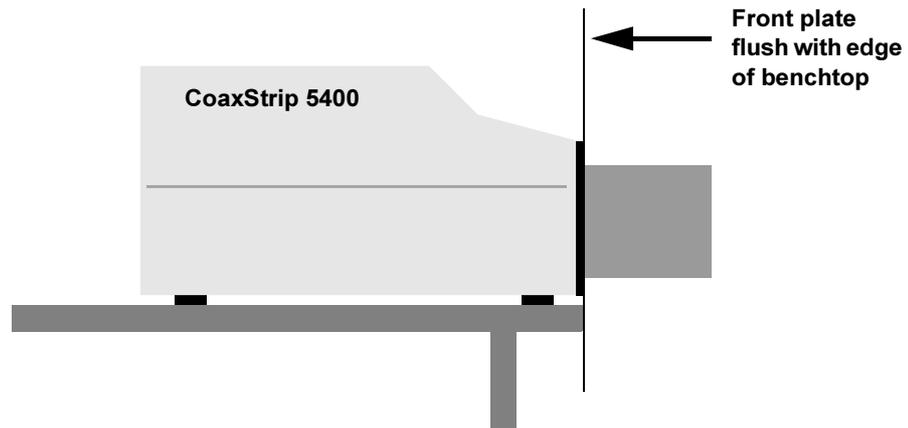


**Fig. 3. Setting up the CoaxStrip 5400**

- Take off the safety cover and remove the transport packaging material (piece of foam plastic). Mount the safety cover.

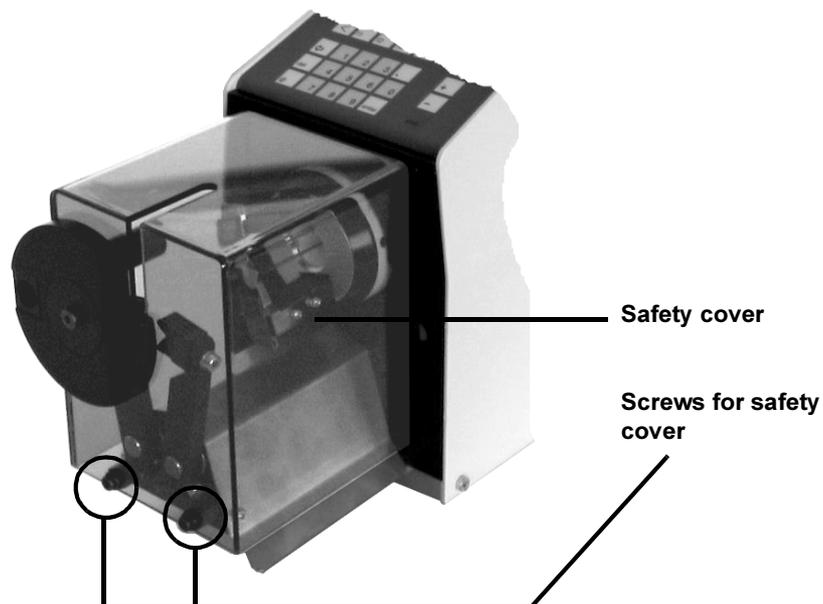

**Fig. 4. Removing the transport packaging material**

- If a foot pedal or other auxiliary equipment is used, connect these (See “CONNECTIONS” on page 22). This is also valid for the RS 232 connection.
- Check the mains voltage on the CoaxStrip 5400. If it does not correspond with the local mains voltage, the correct voltage must be set. (See “Adjusting the Mains Voltage” on page 54).

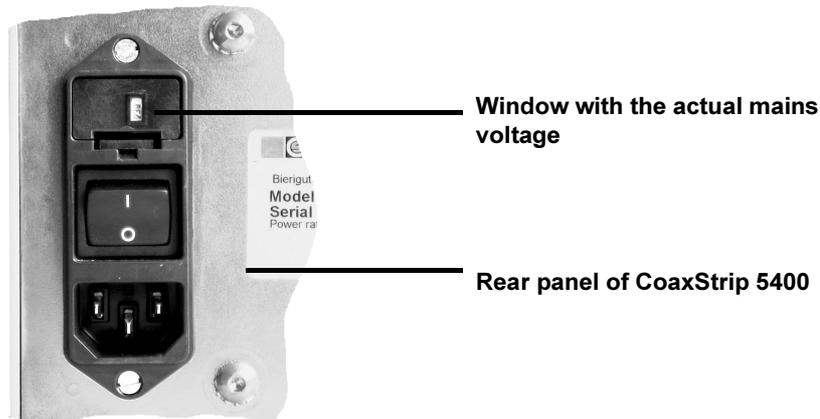

**Fig. 5. Checking the Mains Voltage**

- If switched on, turn the main switch off and plug in the mains cable. The CoaxStrip 5400 is now ready for operation.
-

# KEYBOARD



EACH OF THE  
FUNCTION KEYS F1  
TO F5 SERVES  
SEVERAL  
ICONS



Fig. 6. Operator Panel with Keyboard



With the two **slide keys**, the icons in the display can be “shifted” to the left or the right. This enables the icons outside the display to become visible.



## f1 to f5

With the function keys **f1** to **f5**, the icons or their functions can be activated.



With the **Return key** you go back to the Main menu. With this key you can also move the cursor within the entry fields. (See “The Editing Function” on page 39)



Using **del** in the menu „Programming“, you delete the currently active cable programm. Using **del** in the menu „Save/Load“, you delete the highlighted cable programm in the memory.



Various functions have a toggle field **@**. When a toggle field is activated, a different display language, for example, can be selected with **@**, the presentation of the cable on the display can be changed, or you can switch between "left-hand cable end" and "right-hand cable end". (See "Changing Cable Presentation on Display" on page 45 and "f1 User Interface" on page 35).

Using the **@** button, you can also activate the „Manual Start Function“. Using this, you can initiate a stripping process by pressing a button. This function is only intended for demonstrations and service purposes, however.

- To activate this function, press on **@** in the Main Menu. The Icon at f5 changes to „Start“. You can now initiate a stripping process with **f5**.
- To switch this function off, press once again on **@** in the Main Menu.



THE ICON AT F5 APPEARS AS FOLLOWS IN THE „MANUAL START-MODE“:



0 ... 9

With the **numeric keypad**, values can be entered in the entry fields.



Decimal point



With **enter**, you can confirm the values entered and jump to the desired entry field.



With **+**, the value in an entry field is increased. The key is also used to scroll "upwards" in a wire list.



With **-**, the value in an entry field is reduced. The key is also used to scroll "downwards" in a wire list.



With **Stop**, you can immediately halt production during a stripping operation.

With **Stop**, you also switch the „Single Step“ function on and off:

- To do this, press **stop, f1** in the Main menu. The **Single Step** function will be activated. Each time you press **f1**, the next step will be initiated.
- To de-activate, press on **Stop, f5** in the Main Menu.

# THE MENUS

## The Main Menu

The software in the CoaxStrip 5400 has one Main Menu and 5 sub-menus. The Main Menu appears on the display as soon as the main switch is turned on. The individual menus can be activated with the function keys **f1** to **f5**.

The function keys are always related to the icons positioned immediately above them. If the icon changes, the function key then receives a new meaning. For example, **f1** is used to activate the "Programming" menu and, immediately afterwards, also to type in the outer diameter.

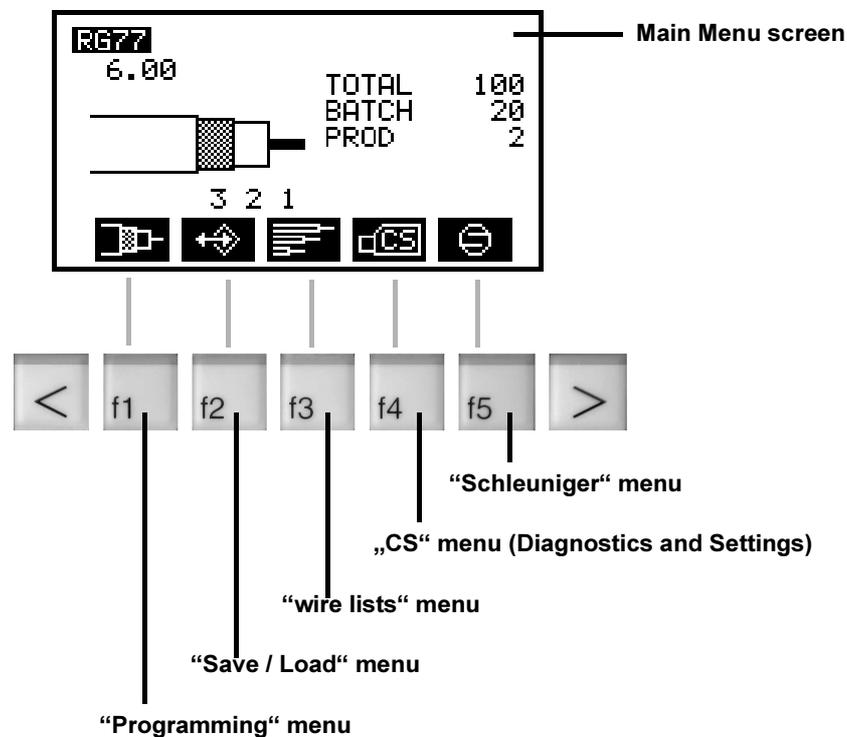


Fig. 7. Main Menu

In the Main Menu, not only can menus be activated, but the number of cables you wish to produce (Total) and the batch size can also be defined. The entry fields are reached with **Enter**.

## The Programming Menu

The "Programming" menu is activated with f1. This menu contains 12 icons (functions), although there is not sufficient space for all of them on the display. That is why the icons can be shifted back and forth with the slide keys. In doing so, the symbols change in the top right of the display.

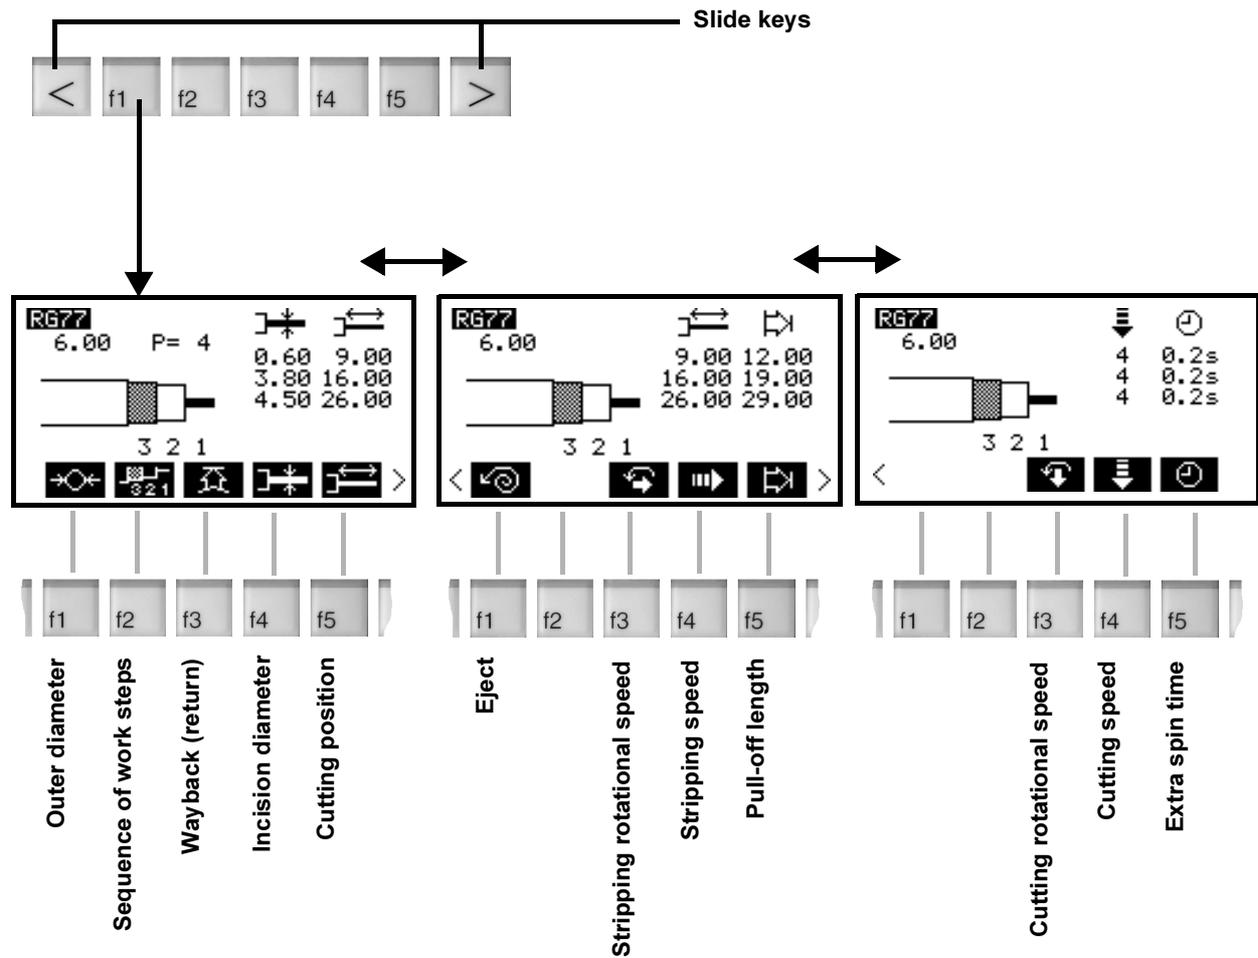


Fig. 8. Illustration of the Programming Menu



**Outer diameter jacket:** With this icon you can determine:


- the outer diameter of the jacket.
- The clamping force of the clamping jaws, which you can adjust to one of 10 levels (P = 0-9).
- and whether you want to process one or both cable ends.



**Sequence of work steps:** In the simplest case, the individual layers are stripped “from the inside outwards“. The conductor first, then the next highest stage, etc. This is not always appropriate, however. The processing sequence can therefore be changed depending on the application (see also “Change Processing Sequence” on page 44).



**Wayback:** With the “Wayback“ function, the blades move back as far as has been programmed after making the incision. This prevents damage to a layer during the stripping process.

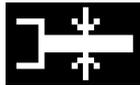

**Incision diameter:** Here, the depth of the incision made by the blades in a layer is determined. The diameter to which the blades should make the incision is entered.



**Cutting position:** This function determines how far away from the end of the cable the blades should make the incision.



**Eject:** Because of static charge, remnants of the stripped material can sometimes remain stuck to the blades. With the “Eject“ function, the cutting head rotates briefly upwards after stripping in order to throw out the remnants.



**Stripping rotational speed:** With this function, the blades can be rotated while stripping. You can also change the direction of rotation by using the key @.



**Stripping speed:** Not all materials adhere with the same strength to the layer which they cover. Well-adhering jackets are preferably pulled off slowly. With this function, the stripping speed can be adapted.

---



**Pull-off length:** After the incision, the stripping of a layer follows. The length of this pull-off can be determined with this icon.

---



**Cutting rotational speed:** Here, the rotational speed with which the blades should rotate during cutting can be entered. You can also change the direction of rotation by using the key @.

---



**Cutting speed:** Here, the speed with which the blades cut into a layer is determined.

---



**Extra spin time:** With most materials, it is sufficient if the blades make a brief incision and then carry out the pull-off. Extremely elastic materials and shield braiding, however, are first squeezed together slightly by the blades and the cut is only made after a specific time. The duration of the cut can therefore be increased here.

---

## The Save / Load Menu

The “Save/Load” menu is activated in the Main Menu with f2. Here, complete cable programs can be named and saved, and be called up as necessary. Cable programs can be deleted or protected. In addition, information about the currently available menu space is given in this menu. A total of 1,000 cable programs can be stored.

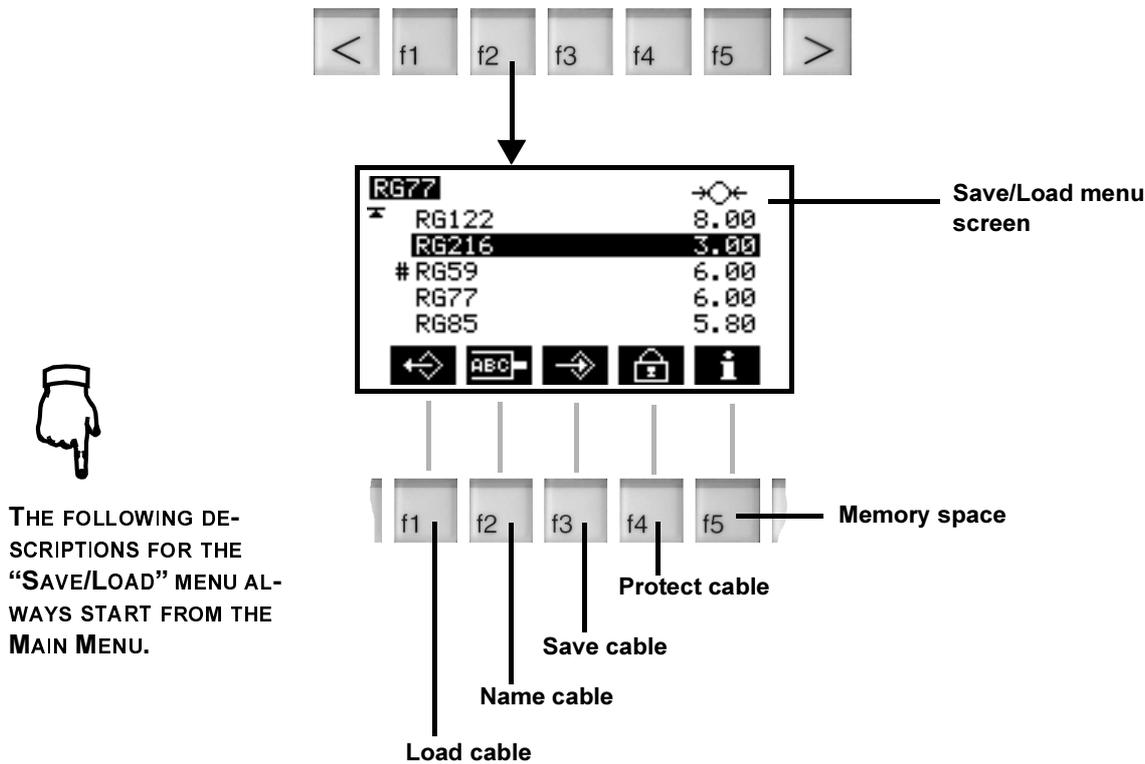


Fig. 9. Illustration of Save / Load Menu



### Load / delete cable:

In order to load a cable there must be at least 1 cable in the memory.

- Press **f2**, and the list with all stored cables will appear.
- With **+** or **-**, you can search for the desired cable and press **f1**. The cable is loaded.
- To delete the cable, press **Del** after making the selection.

A search help is available for very long lists. Assume that 100 cables are stored and you are looking for cable "RG 123.456".

- Press **f2**, **f2**. Groups of letters appear in the footer of the screen (Fig. 10).
- Press **f4**. This is the group containing the initial letter "R" of the cable you are looking for.
- Press **f3**, the cursor jumps to the cables which begin with "R".
- Now, select the desired cable with **+** or **-**, and press **f1**. The cable is loaded.



#### Naming and saving cables:

Assuming the cable has the name "RG 178". Type in the name with the following key sequence:



- **f2 f2 f4 f3 f2 f2 f5 f4 178**.  
The cursor indicates the position in the list where the cable will be inserted.

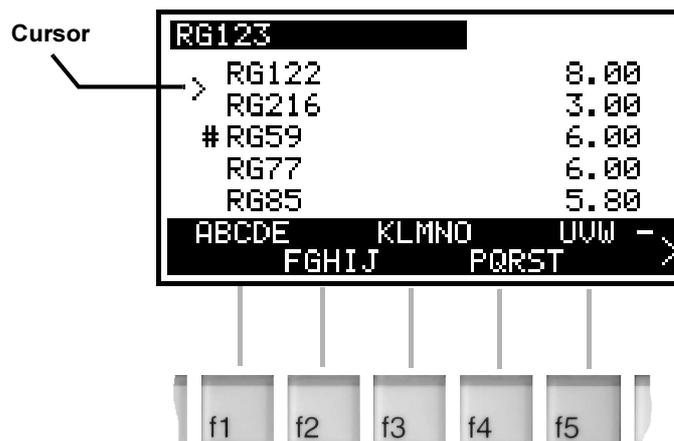


Fig. 10. Naming and Saving Cables

- Now press **Enter** and **f3**, the cable is saved.

**Protecting cables:**

Cables can be protected in order to prevent them from being inadvertently deleted:

- Press **f2**, the list with all stored cables appears.
- Use **+** or **-** to search for the desired cable and press **f4**. The cable is protected. A protected cable is marked with the **#** symbol.
- In order to “unlock” the cable, select it and press **f4** again.

**Memory space:**

If a lot of cable programs have been saved, it is useful to know how much memory space is still available. Press **f2** and **f5**, the remaining memory space is displayed.

---

## The CS Menu (Diagnostics and Settings)

Work in the “Diagnostics and Settings” menu must only be carried out by persons with the corresponding training. (Schleuniger personnel, trained user personnel).



All machine parameters, fixed settings, etc. are defined in the “Diagnostics and Settings” menu. The diagnostic procedures are also carried out here. For this purpose, 5 additional menus are available, which are activated with the f keys.

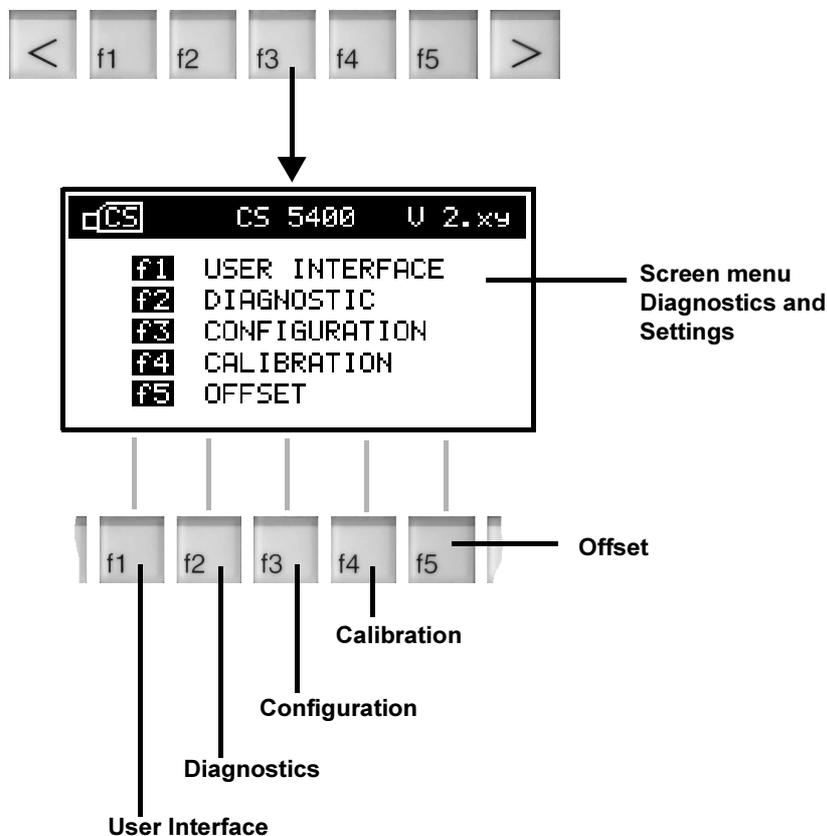


Fig. 11. Illustration of the Diagnostics and Settings Menu

### f1 User Interface

Here, the display language, German or English, can be defined and the unit of measurement can be selected to be millimeter or inch. Press **Enter** until the desired entry field is selected and use **@** to select the appropriate setting. The number of pieces produced up to now is displayed in the bottom line.

## f2 Diagnostics

The display for the Diagnostics menu is activated with f2. Various icons are to be found here, as with most of the other menus. When one of the icons is selected with the corresponding f key, the CoaxStrip carries out the requested function.

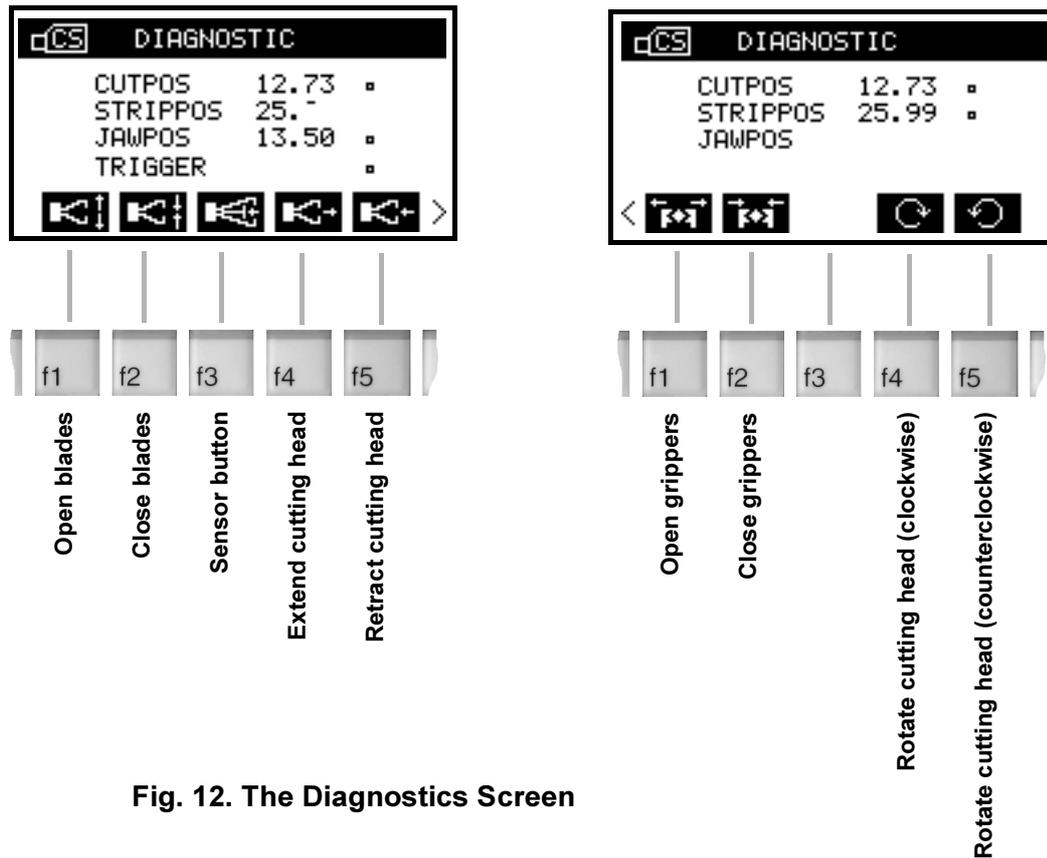


Fig. 12. The Diagnostics Screen




### Open blades, close blades:

- Press and hold down **f1**, the blades open.
- Press and hold down **f2**, the blades close.




On the display, the actual blade opening can be seen at "CUTPOS".

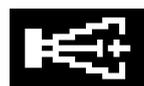


### sensor button:

- Press **f3**. The sensor button moves in as far as the stop, and moves out again after a short time.

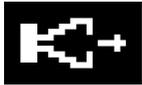**Extend Cutting head / Retract cutting head:**

- Press and hold down **f4**, the cutting head moves out.
- Press and hold down **f5**, the cutting head moves in.

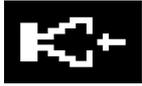

The actual position of the cutting head can be seen on the display at "STRIPPOS".

**Open grippers / Close grippers:**

- Press and hold down **f1**, the grippers open.
- Press and hold down **f2**, the grippers close.



The actual opening of the grippers can be seen on the display at "JAWPOS".

**Rotate cutting head:**

- Press and hold down **f4**, the cutting head rotates in clockwise direction.



- Press and hold down **f5**, the cutting head rotates in counterclockwise direction.

## f3 Configuration

In the „Configuration“ menu **f3**, you can activate and deactivate the „User password“.

### Activating the user password

- Press **f1**, enter 4 numbers from 1 to 9 and confirm with **Enter**.

If a password is activated, the following menus and functions will be protected:

Menus	Programming	Save / Load	CS (Diagnostics and Settings)
<b>Functions</b>	<ul style="list-style-type: none"> <li>• The entire menu is protected.</li> </ul>	<ul style="list-style-type: none"> <li>• Saving cables (f3)</li> <li>• Protecting cables (f4)</li> <li>• Deleting cables (del)</li> </ul>	<ul style="list-style-type: none"> <li>• Calibration (f4)</li> <li>• Offset (f5)</li> </ul>



**IF YOU HAVE FORGOTTEN THE CURRENT PASSWORD, CONTINUE WITH THE „SERVICE PASSWORD“ (SEE „MAINTENANCE“)**

## Deactivating the user password

- Press **f1**, enter the current password and confirm with **enter**.

## f4 and f5

See „Maintenance“

## The Wire Lists Menu

The „Wire Lists Menu“ is described in its own chapter, see Page 46.

## The Schleuniger Menu

The “Schleuniger” menu is activated with **f5**. Here, you will find information such as the postal address, Internet address, etc.

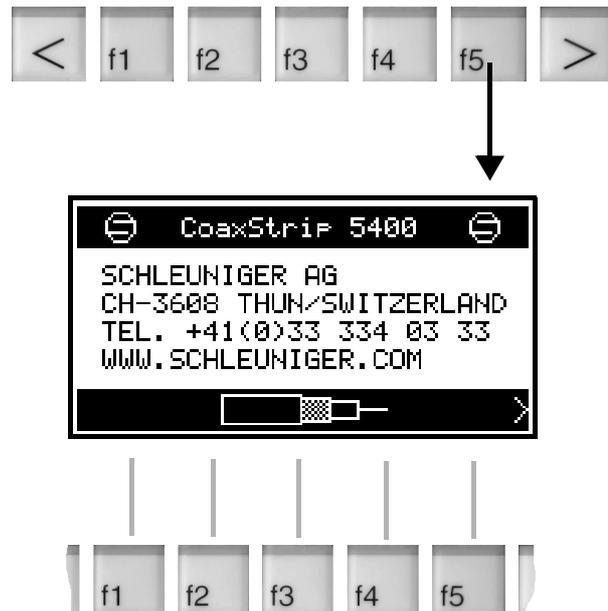


Fig. 13. Illustration of the Schleuniger Menu

# PRACTICAL WORK

## The Editing Function

Different displays, keys with icons and entry fields are used for programming a cable and for correcting set values. Please note the following rules:

- Keys **f1** to **f5** are used to select functions such as “incision diameter” or “cutting position”.
- In order to move the cursor up and down in a column of numbers, repeatedly press the corresponding **f-key**, **enter** or the **Return key**.
- Values can be directly entered in the fields with the numerical keys **0** to **9** or can be changed with the **+** and **-** keys.


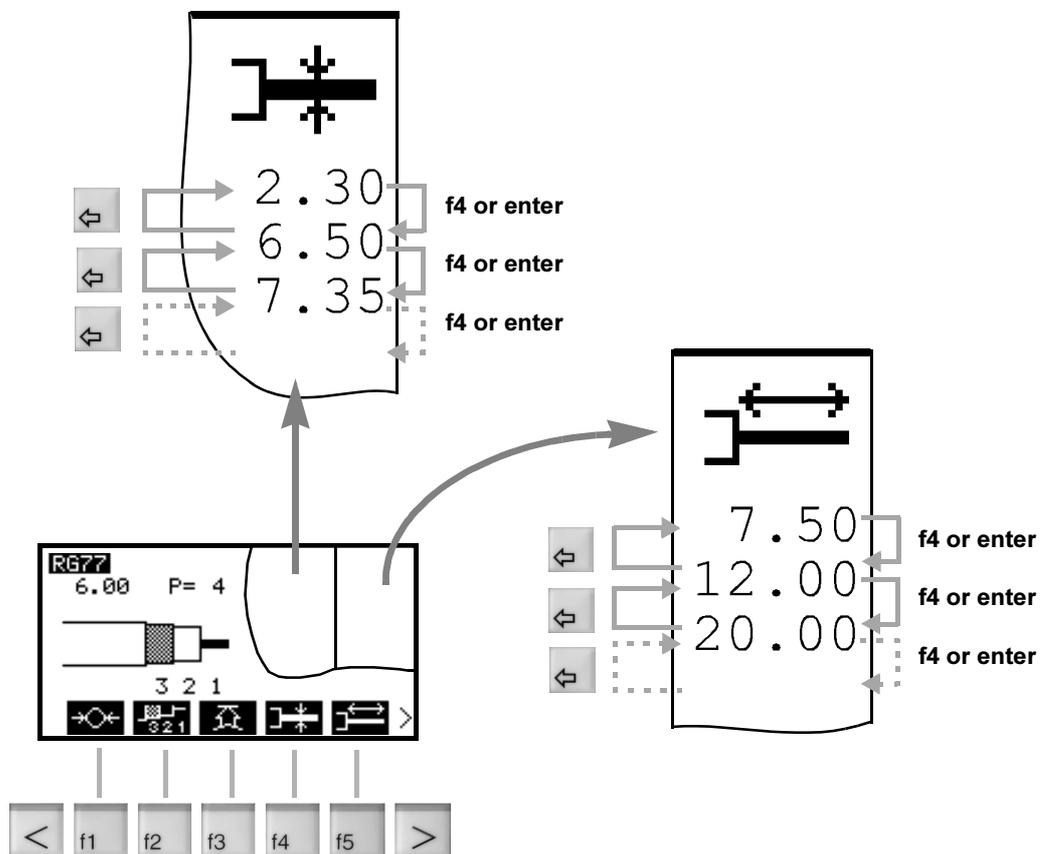


Fig. 14. Editing Function

## Programming Example

The programming of a stripping process can best be explained based on a practical example. For this purpose we will use a coaxial cable with 4 layers of which 3 are to be stripped. The cable and the dimensions to be programmed can be seen in the following illustration.

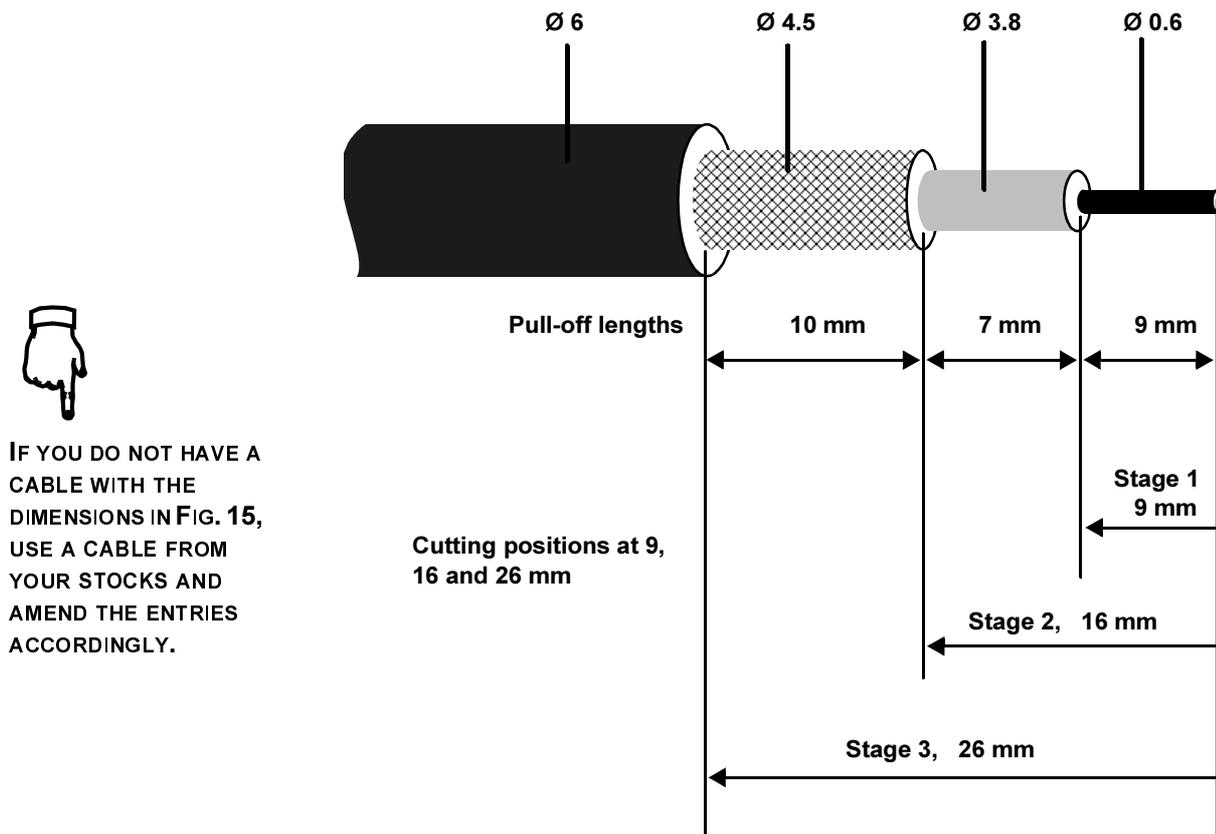

**Fig. 15. Programming Example, Coaxial Cable with 4 Layers**

The stripping procedure for this cable takes place in 3 layers. The lengths of the individual pull-offs (10, 7 and 9 mm) can be seen in the illustration. These dimensions however are not typed into the CoaxStrip, and the cable end is always taken as the start point to program the “cutting positions” (9, 16 and 26 mm). This necessitates a bit of research work, but you then immediately know at which position the pull-off will start.

- Turn the main switch on. The display with the Main Menu appears. At the top, you can see the name and the outer diameter of the actual cable.



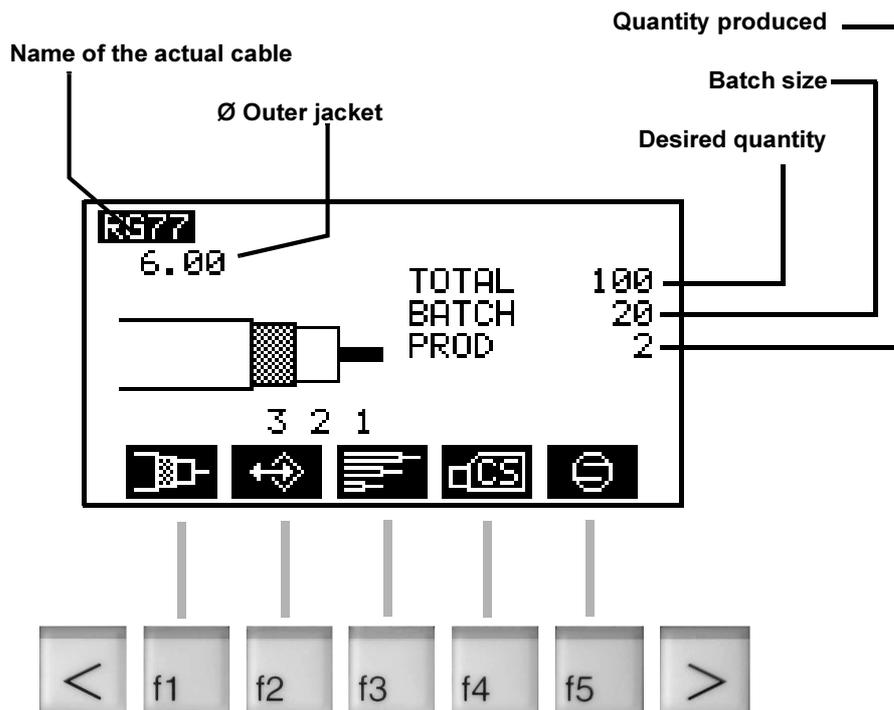


Fig. 16. Main Menu Display

Programming Step	Key Sequence
Define the desired quantity and the batch size.	<b>enter 5 enter 0 enter enter</b>
Delete all existing values for the new cable. Define the outer diameter of the jacket and the clamping force of the grippers.	<b>f1 del f1 f1 6 enter 4 enter</b>
In the dialog window which now appears, determine whether one or both ends of the cable are to be processed.	<b>f1</b>
Enter the diameter and the pull-off lengths for the 3 layers.	<b>f4 0.6 enter 9 enter 3.8 enter 16 enter 4.5 enter 26 enter enter</b>

- **Stripping start with wire end:** Lead the cable through the slot in the safety cover and touch the sensor button. The machine will cycle.


**Stripping start with foot pedal:** If you are working with a foot pedal, the blade holders will move together and cover the sensor button. Lead the cable through the slot in the safety cover and touch the blade holders. Press the foot pedal. The machine will cycle.

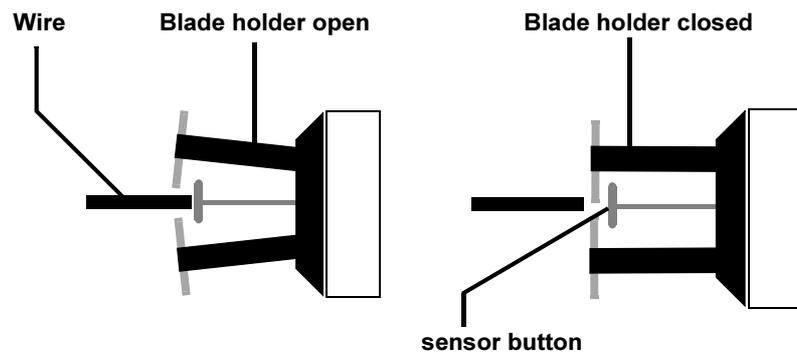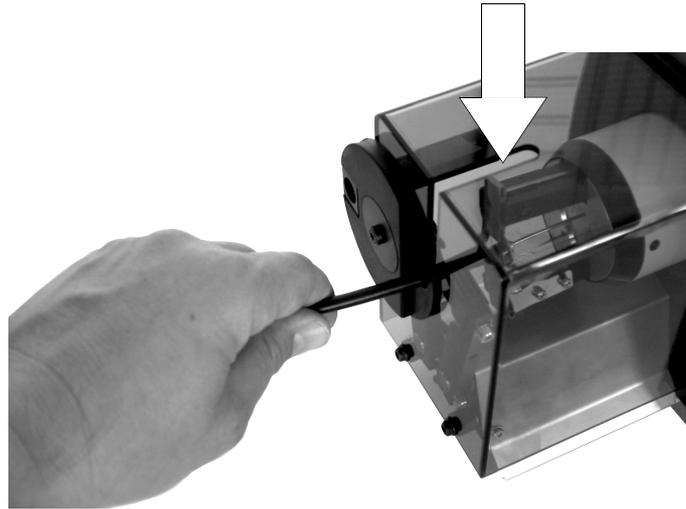

**Fig. 17. Initiating the Stripping Process**

## Diameter more than 7.5 mm

For cable diameters greater than 7.5 mm, you must swivel the guide tube forwards. Insert the cable through the guide tube and start the stripping process as described above.

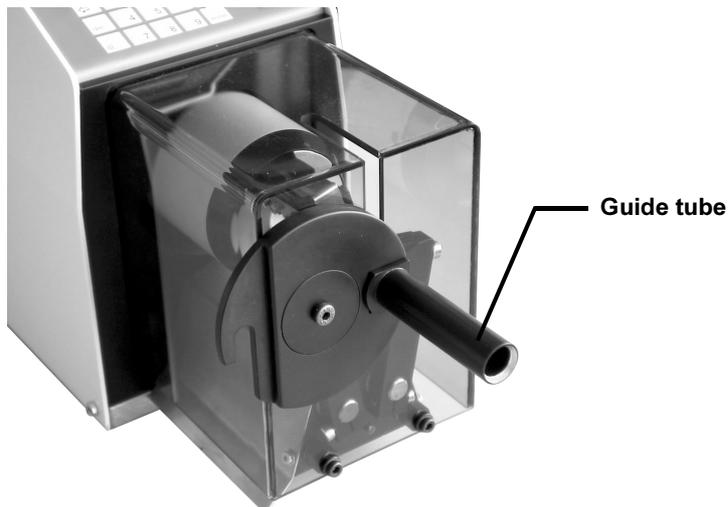

**Fig. 18. Stripping using the guide tube**

## Further Processing Parameters

In most cases, the diameter, pull-off lengths, clamp force and quantities are entered in order to process a cable. Further processing values such as Way Back and cutting speed are available as standard values. They can be adapted to a cable at any time, however. Sometimes, for example, a larger Way Back is necessary or the stripping speed has to be somewhat slower. These processing parameters are described in "The Programming Menu" on page 29.

## Processing Both Cable Ends


If both cable ends are to be stripped, switch over to the “Both cable ends” function. Then enter the “new” pull-off lengths. If other values are altered, such as the diameter or the cutting speed, then these will naturally relate to both ends.

Programming Stage	Key Sequence
Activate “Both cable ends“.	<b>f1 enter enter f5</b>
On the display, the symbol @A appears on the cable. Switch to @B.	<b>@</b>
Enter the new pull-off lengths:	<b>f5 6 enter 14 enter 22 enter</b>

With **@** you always change to the other cable end. To switch back to “a cable end”, press **f1 Enter Enter f1**.

## Change Processing Sequence

In the programming example, the blades have cut into the cable a total of 3 times. With the “standard” sequence 1, 2, 3 the CoaxStrip stripped the conductor first, then the dielectric and finally the shield. In doing so, the blades had to cut through the metallic shield twice. If the processing sequence is altered, the blades only have to cut through the metal once. Result: increased service life of the blades.

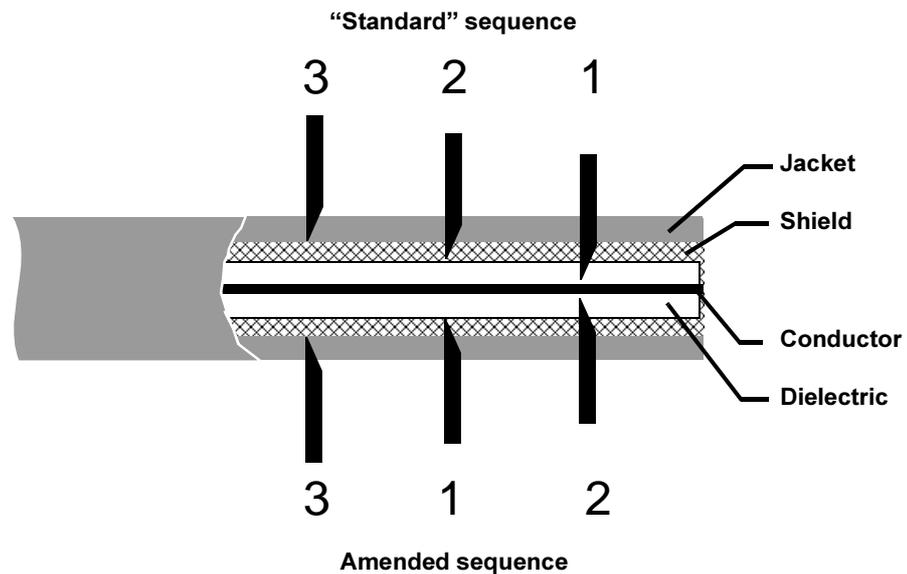

**Fig. 19. Changing the Processing Sequence**


## Changing Cable Presentation on Display

The appearance of the cable on the display can be altered:


- Keep pressing **f4** in the „Programming Menu“ until the desired layer is marked with the small arrow. That means that the entry field for the diameter of this layer is selected, and the small arrow points to the desired layer.
  - The pattern of the layer can now be changed with **@**. A choice between 3 different patterns can be made.
-

# WIRE LISTS


A wire list is made up of a number of wire files. The wire lists can also be individually stored and processed in the same way as the individual wire files. In total, you can save 100 wire lists of 150 wire files each. All the icons that you will see in the „wire lists“ menu will be briefly described below. The explanations are followed by the exact description of the processes, such as „Creating a wire list“, „Save / delete a wire list“ etc.

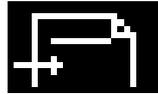

**Activating or deactivating a wire file in a wire list:** Assuming that you are using a wire list with 10 wire files. You only want to produce a part of these 10 wires, however. With this function you can activate the cables you need and deactivate the cables that should not be produced. Active cables are marked with a +. The **Enter** button has the same function.

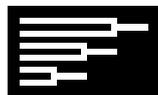

**Open the „Wire list Production Menu“:** In the Main Menu, you can reach the „Wire list Production Menu“ with this function, and, from there, can reach the wire list memory with the same icon.

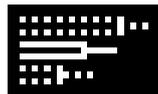

**Display the cable memory:** With this function, the cable memory appears in the display. (Not to be confused with the *Wire List* memory!)



**Find cable:** With this function, you will look for a wire file within a wire list or in the cable memory.




**Find a wire list:** With this function, you will look for a wire list in the cable memory.



**Save:** With this function, you will save new or changed wire files and wire lists.



**Display the content of the wire list:** This function displays the content of a wire list. Changes to a wire file will also be recorded in a wire list with the help of this function (only processed quantities).

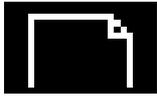

**Creating a new wire list:** With this function, you can create new wire lists.



**Save List under:** With „Save under“, you can copy the content of a wire list and change the name of the list. This is particularly convenient if you wish to produce wire lists that are similar to one another.



**Manual Start:** With this function, you can initiate one stripping process for each push of the button.



**Name new lists:** With the help of this button, you can give a name to a new wire list.




**Info-button:** Shows the memory allocation of the wire list memory.



**Load wire list:** In this way, you can load a wire list into the „Wire list Production Menu“.



**Return button:** With the Return button ⇐ you can always return to the previous function.

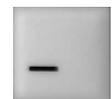

**Plus and Minus buttons:** Using the Plus and Minus buttons, you can „scroll“ through the cable memory, in the wire list memory and in a wire list.

## Load a wire list

In order to be able to load a wire list, at least one wire list must be present in the memory. With the factory settings, 3 wire lists are stored.

- In the Main Menu, press on **f3**. The „Production Menu Wire List“. then appears on the screen

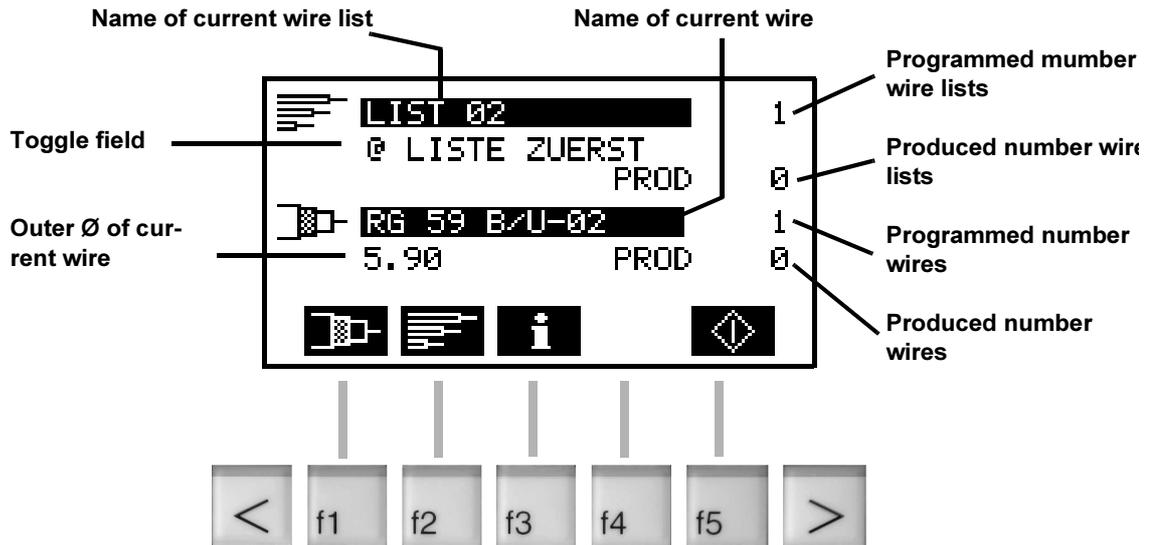


Fig. 20. Screen of „Production Menu Wire List“

- Press **f2**. The wire list memory appears on the screen. With the buttons + or -, you can mark the desired wire list.

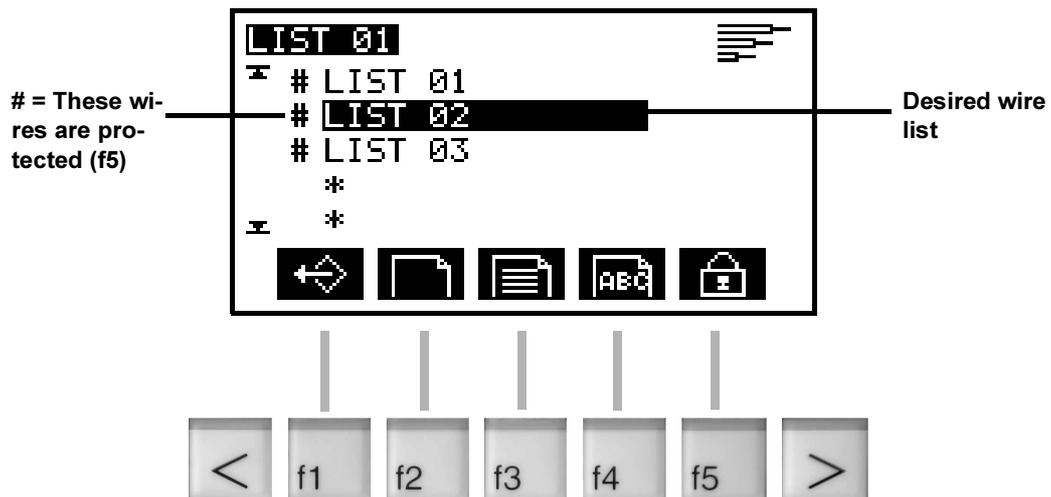
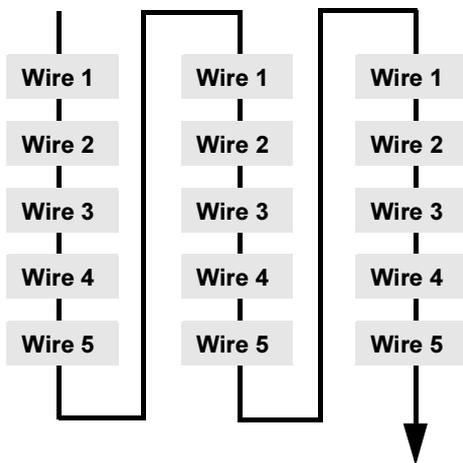


Fig. 21. Select wire list


- Press **f1**. The marked wire list will be loaded. The „Production Menu wire lists“ reappears on the screen.
- Press **Enter**. The cursor jumps to the „Programmed Number of wire lists“ field. Enter how many wire lists you want to produce.
- Press **Enter**. The cursor jumps to a „Changeover field“. In this way, you can determine the manner in which the current wire list should be produced. Let's assume that you have programmed a wire list with 5 different cables and want to produce this list three times. With the toggle field @, you can do this in two ways:

**LIST FIRST**

The wire list will be produced three times, one after the other.

**WIRE FIRST**

Each wire will be produced three times, one after the other.

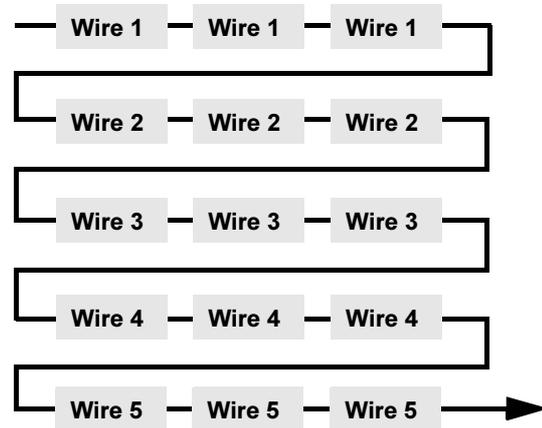


**Fig. 22. List first, Cable first**

- Press **enter**. The machine is now ready to produce.

## Creating a new wire list

You can create a new wire list by loading different wire files from your cable memory into the list. You do this in four steps:


1. Name the new wire list.
  2. Store the name.
  3. Load the desired wire files into the new list.
  4. Save the new wire list.
- In the Main Menu, press **f3**. The „Production Menu wire list“ appears on the screen.
  - Press **f2**. You are now in the „Wire list memory“ screen.
  - Press **f2**. This brings you to the screen in which you can name the new wire list. The cursor > indicates the position at which the new list will be placed.

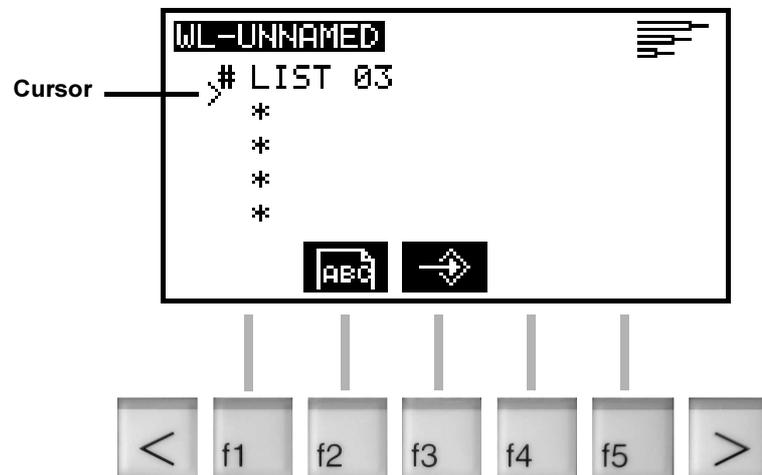

**Fig. 23. Naming the wire list**

- Press **f2**. „Write“ the name of the new wire list. This is done in exactly the same way as when producing individual cables (See also „Naming and saving cables“, Page 33.) In our example, the name is „LIST 04“.
- Confirm with **Enter** and save with **f3**. The new list is now in the wire list memory, but is still empty.

- Press **f3, f3**. The cable memory with the wire files appears on the screen.
- With the buttons **+** and **-**, you can now mark a desired wire file and press **f3** or **Enter**. This wire file will now have a **Plu** sign (+) added to it and will be accepted in the list. Carry out the same procedure with all the wire files that you want to have added to the list.

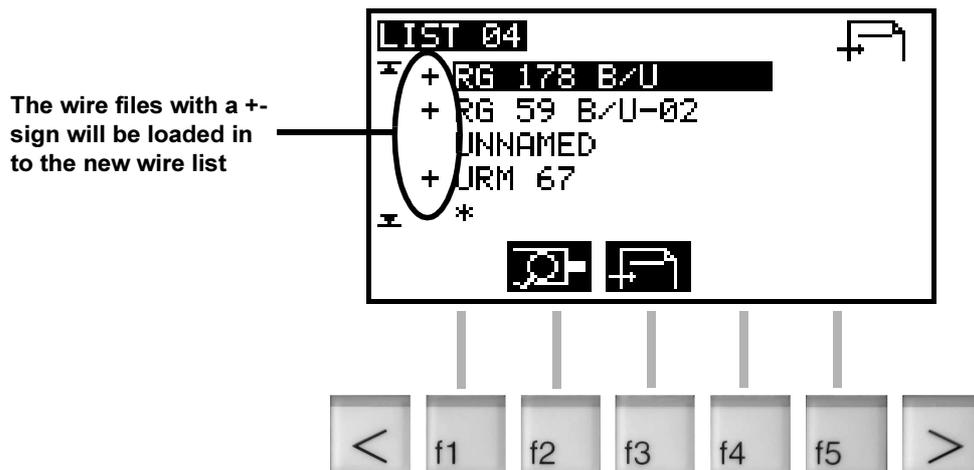


**Fig. 24. Loading a cable program into the wire list**

- Press the **Return key** ↵. CAUTION: The wire list is not yet saved. You can now do this with **f4**. If you press the Return key ↵ again, you will see the new list in the wire list memory.
- If you now realise that an additional cable should also belong in the list Sie, go back into the cable memory with **f3, f3**, mark the desired cable and re-save the list.



THESE ARE THE SYMBOLS FOR THE SEARCH FUNCTION

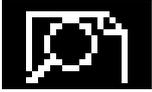

## Search function in a wire list

If you have already saved many wire files and wire lists, searching with the keys + and - is rather tedious. The Search function simplifies searching significantly:

- In the screens in which one of the following symbols appears, you can use the Search function. To do this, press on the key below the symbol.
- Enter the full name or the first letter of the wire file or the wire list and press **Enter**.
- You can also search for a group of cable programs or wire lists. To do this, only enter the first letter, for example, **W**. Now press **Enter**, and the cursor will jump to the cables or wire lists that start with a W.

## Deleting wire files in a wire list

- Starting in the Main Menu, press the following keys: **f3**, **f2**.
- Select the desired wire list with the Plus key +, the Minus key - or the **Search function**. Press **f3**.
- Select the desired wire file with the Plus key +, the Minus key - or the **Search function**.
- Press **Del**. If the wire file has been locked (#), first press **f5** and then delete the wire file.
- Press die **Return key** ↵ and **f1**. The wire list will be re-saved.



IF YOU ARE ALREADY IN THE CABLE MEMORY OR WIRE LIST MEMORY, IT IS NOT NECESSARY TO START FROM THE MAIN MENU.

## Adding wire files to a wire list

- Starting in the Main Menu, press the following keys: **f3**, **f2**.
- Select the desired wire list with the Plus key +, the Minus key - or the **Search function**. Press **f3**, **f3**.
- Select the desired wire file with the Plus key +, the Minus key - or the **Search function**.
- Press **f3** or **Enter**. The desired wire file will be marked with a Plus sign.
- Press die **Return key** ↵ and **f4**. The wire list will be saved again.

## Modifying wire files in a wire list

- Start in the „Main Menu“ and press **f3, f1**. You will now see the same screen as when programming individual cables. You can enter the new dimensions for the current cable here.
- Press the Return key ↵. You will now be back in the „Production menu wire lists“.

The wire list will now be produced with the changed cable. The parameter change will remain active as long as the current wire list is in production. The wire file contains the original values.



**IF YOU ARE ALREADY IN THE WIRE LIST MEMORY, IT IS NOT NECESSARY TO START FROM THE MAIN MENU.**

## Wire list „Save as“ (copy)

- Start in the „Main Menu“ and press **f3, f2**. You will now be in the wire list memory.
- Select the desired wire list with the Plus key +, the Minus key - or the **Search function**. Press **f3, f2**.
- Enter the new name for the wire list, for example „LIST 01B“. Press **Enter** and **f4**.
- Press the **Return key** ↵. You are now back in the wire list memory, and the list with the new names has been saved.

## Save / load a wire list

You will always **save a wire list** whenever you create it from new or if you change it. Please read the Paragraph „Creating a new wire list“, Page 50.

You can **delete a wire list** as follows:

- Start in the Main Menu and press **f3, f2**. You are now in the wire list memory.
- Mark the desired wire list with the + or - key. You can also use the Search function to do this.
- Press **Del**. If the list has been locked, (#) an error message appears in the display. Then press **Enter**. With **f5**, you can remove the lock and can then delete the list with **Del**.
- You can return to the Main Menu with the **Return key** ↵ .


# SETTINGS

## Adjusting the Mains Voltage



- Turn the main switch off and isolate the CoaxStrip 5400 from the power supply. The mains voltage must only be adjusted by appropriately trained personnel (Schleuniger personnel, trained user personnel).

- Pull out the fuse holder. This is best achieved when the catch is raised with a screwdriver.
- Take the voltage selector out of the fuse holder and put it back in again at the desired position. The voltage that has been set now appears in the small window.

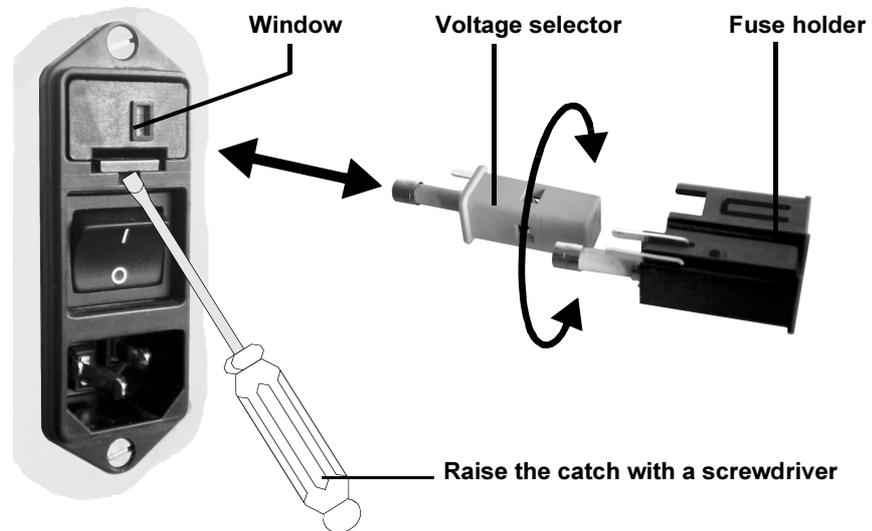

**Fig. 25. Adjusting the Mains Voltage**

- Insert the fuse holder back into the CoaxStrip.
- Replace both mains fuses:
  - 100/115 VAC = 2 x 2.0 A/T
  - 230/240 VAC = 2 x 1.0 A/T
- Plug in the power cable.

## Setting the display language and the measurement units

- Switch on the main switch.
  - Go to the „CS“, „User Interface“ menu. Key sequence: **f4 f1**.
  - By pressing **Enter**, you switch to the wanted parameter. Using **@**, you can choose the language and the measurement units. Confirm with **Enter**.
  - The **Return key** (press 2x) brings you back to the Main Menu.
-

---

# TECHNICAL DATA

---

<b>Max. outer diameter</b>	11 mm (0.44")
<b>Max. stripping length</b>	40 mm (1.58")
<b>Max. processable layers</b>	9
<b>Machine cycles</b>	3 Layers = 4 to 7 sec./h (depends on programmed parameters)
<b>Stripping performance</b>	3 Layers ~ 300 to 600 piece/h (depends on programmed parameters)
<b>Programming capacity</b>	1,000 cables / 500 wire lists
<b>sensor button in strip. process</b>	By sensor or footpedal
<b>Wire clamping</b>	By motor, clamping power programmable
<b>Interfaces</b>	RS 232; Footpedal; CAN (optional)
<b>Noise level</b>	75 dB
<b>Power supply</b>	100/115 VAC: Fuse 2.0A/T 230/240 VAC: Fuse 1.0A/T 50 - 60 Hz, 150 VA
<b>Dimensions LxWxH</b>	480 x 140 x 235 mm (188.9 x 55.1 x 92.5")
<b>Weight</b>	12 kg (26.7 lbs)

---

# INDEX

## Symbols

-	27
+	27
@	27

## A

About these Operating Instructions	21
Activating or deactivating a wire file	46
Adding wire files to a wire list	52

## C

Cable first	49
Connections	22
Creating a new wire list	50

## D

Deactivating the user password	38
Diagnosis	36

## E

Editing Function	39
enter	27

## F

f1 to f5	26
First Start-up of the CoaxStripper 5400	21
Foot Pedal	22, 42
Further Processing Parameters	43
Fuse Holder	23, 54

## K

Keyboard	26
----------	----

## L

Layer	21
List first	49
Load / delete cable	32
Load a wire list	48

## M

Main Menu	28
Main Switch	23
Mains Connection	23
Mains Voltage	
Adjustment	54
Checking	25
Manual Start Function	27
Menus	

Cable Lists .....	38
Diagnosis and Settings .....	35
Main Menu .....	28
Programming .....	29
Save / Load .....	32
Schleuniger .....	38
Modifying wire files in a wire list .....	53

## N

Naming and saving cables .....	33
--------------------------------	----

## P

Password .....	37
Practical Work .....	39
Processing Both Cable Ends .....	44
Programming Example .....	40
Change Processing Sequence .....	44
Changing Cable Presentation on Display .....	45
Further Processing Parameters .....	43
Processing Both Cable Ends .....	43
Protecting cables .....	34

## R

Rear Panel CoaxStripper 5400 .....	22
Return button .....	47
Return Key .....	26
RS 232 Connection .....	22

## S

Save / load a wire list .....	53
Setting the display language and measurement units .....	55
Settings .....	54
Setup .....	24
Single Step Function .....	27
Slide Keys .....	26
Stripping with Foot Pedal .....	42
Stripping without Foot Pedal .....	42
Symbols	
@ .....	27

## T

Technical Data .....	56
----------------------	----

## U

User Interface .....	35
----------------------	----

## V

Voltage Selector .....	54
------------------------	----

## W

Wire list „Save as“ (copy) .....	53
----------------------------------	----

